ASSEMBLY INSTRUCTIONS:

Product Code: RF2

Product Name: Rapid Flux 2 - Large



TIME REQUIRED: **TOOLS REQUIRED:**

Screwdriver, Electric Drill, Pencil, Measuring tape/Ruler 10 minutes

*Tools are not included.

SKILL REQUIRED:







Hard

The Assembly Skill Rating is a 5-point system that shows the degree of effort needed in assembling a specific product. With 1 being easy for the average person and 5 requiring an expert. For most products, two persons are recommended.

NOTE

- As this is a commercial product, some intermediate skills may be required.
 - No pre-drill holes or markings are provided on our table or desk tops.
 - Please check you have all hardware before assembling.
- If you are missing any hardware, please contact your Rapidline reseller. Please ensure you have the name of the item, required hardware part and quantity.
 - Please retain your receipt as proof of purchase to validate your warranty.
 - Assemble on a clean, flat, smooth surface such as a rug or carpet to avoid parts from being scratched.
 - Remove all wrapping materials, including staples and packing straps before you start to assemble
 - Keep all hardware parts out of reach of children.


CAUTION


- Heavy product. Do not attempt to lift or move without help
- Do not tighten screws and bolts until completely assembled.
- Do not use this product unless all bolts and screws are firmly secured and tightened.


WARNING

- If parts are missing, broken, damaged or worn stop using the product until all repairs are made.
 - Failure to follow these warnings could result in serious injury.


Item No.: RF2 W RF2 B Installation guide

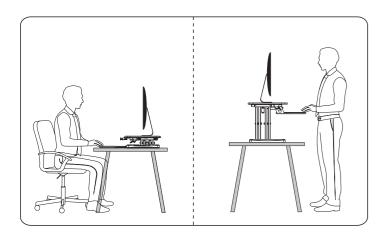

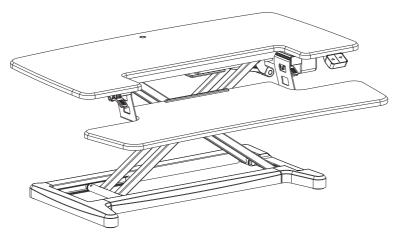

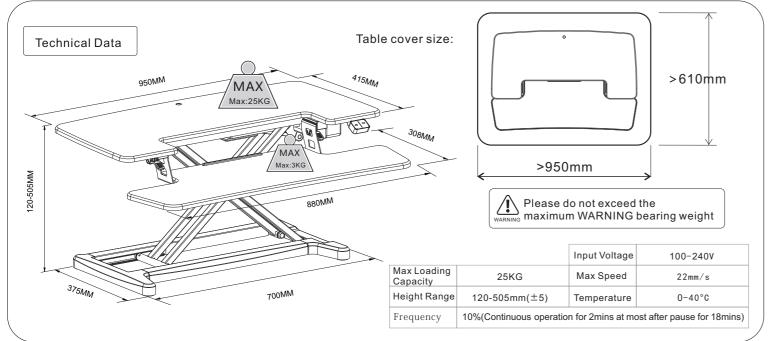


Accessory Package List No. **Keyboard Tray** Cable Ties Desktop Frame No. No. x4 *x1* No. Power Cable No. Cable Management Power Adapter No. F D

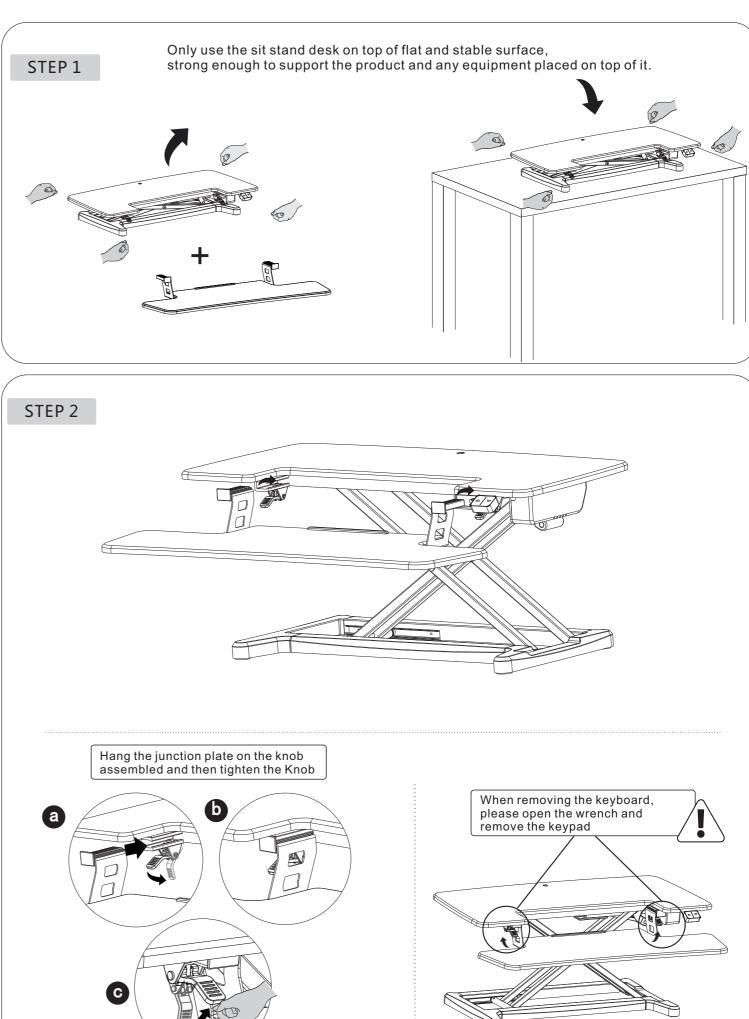






STEP 3 Connect power adapter and cable instructions may result in serious personal injury.

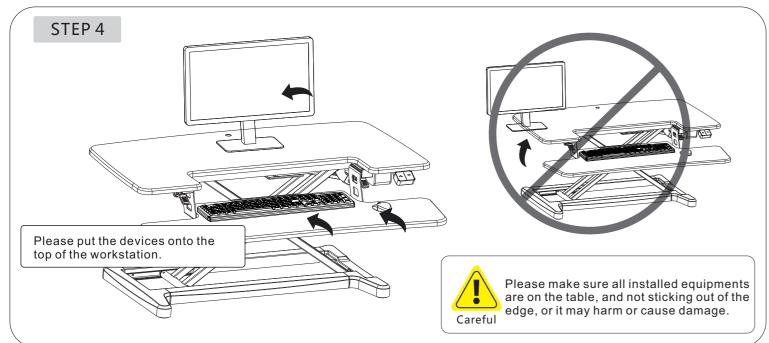

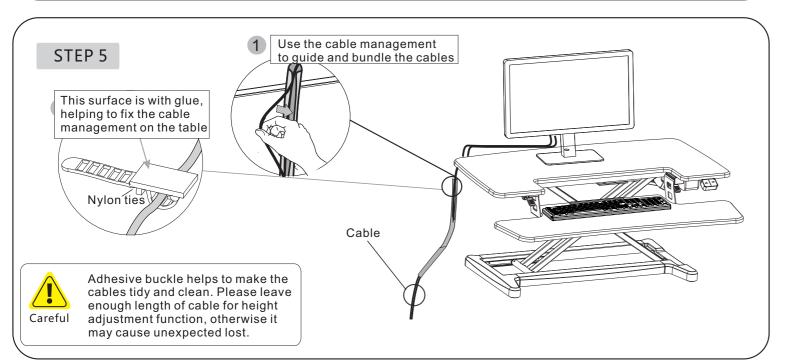

How to use handswitch

Common fault treatment

those fault and error.

with power supply

Fault Phenomenon

Downward sliding

Overwork

•	" ▲ "	Adjust the desk upwards
	"▼"	Adjust the desk downwards

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the

No response while long pressing 1. Check if all the cables be connected well down/up button after connected

Method

. Contact your supplier or dealer

2.Contact your supplier or dealer

1.Restart after suspend for 30mins

2.Contact your supplier or dealer

.Check if overloaded, Max loading :25kg

manufacturer and professionals are capable for investigating and correcting



Upwards



- 1. Power supply: AC100V-240V,50/60HZ
- 2. Service Environment: 0-40°C
- 3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
- 4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste
- 5. Check carefully to ensure correct and complete assembly before using.
- 6. Be familiar with all functions and program settings of the product before first use.
- 7. Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on
- 8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
- Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
 This appliance can be used by children aged from 8 years and above and persons with
- reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- 11. Cleaning and user maintenance shall not be made by children without supervision.
- 12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- 13. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
- 14. Keep the original package of the equipment if necessary in case of the future use in transportation.

Waste disposal





This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.





Please first adjust it to the highest, then remove equipment to avoid harm or damage.





Please move it by two persons, or parts may collide and cause damage.