
 

 



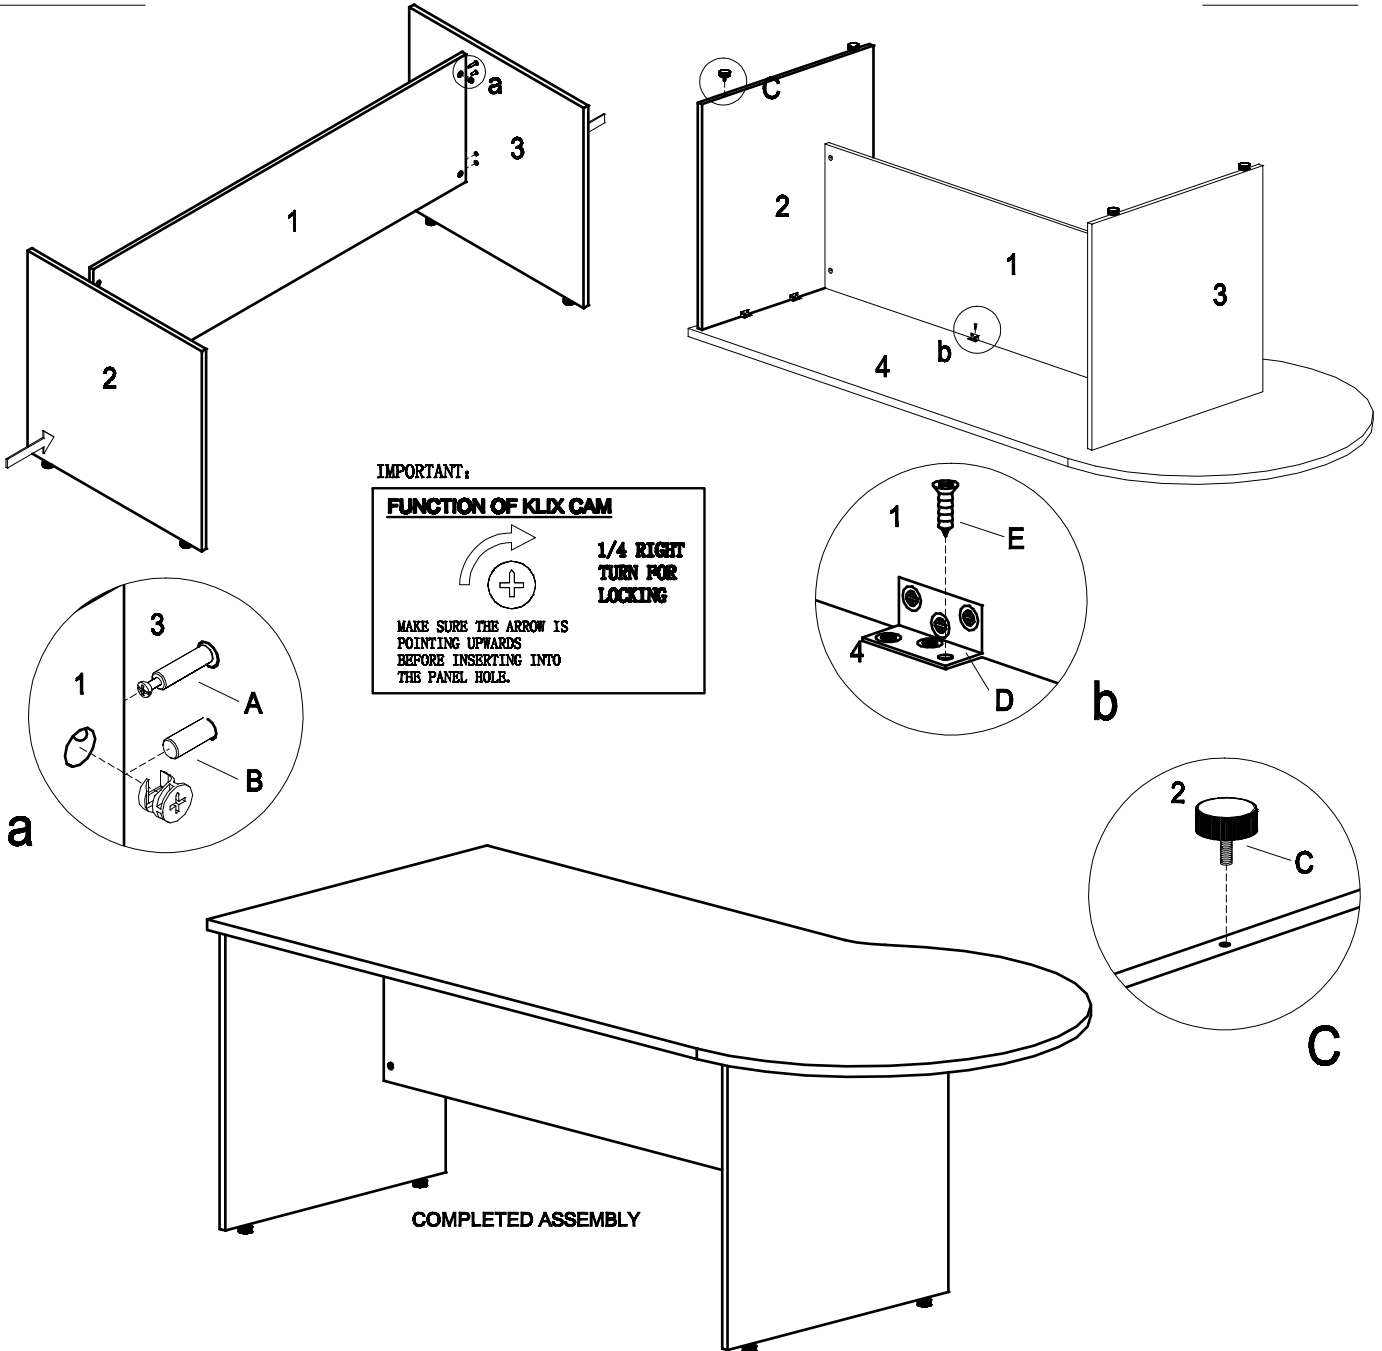
# ASSEMBLY INSTRUCTIONS

## MODEL NO.:DKP21

<b>A</b>  4 (ø 15x32) <b>CAM LOCK</b>	<b>B</b>  4 (ø 8x30) <b>DOWEL</b>	<b>C</b>  4 (H16) <b>ADJUSTABLE GLIDE</b>	<b>D</b>  6 <b>6 HOLE L-BRACKET</b>	<b>E</b>  36 (#4 x14) <b>SCREW</b>
--	--	--	--	---


### STEP 1

### STEP 2






**IMPORTANT:**

**FUNCTION OF KLIX CAM**

 **1/4 RIGHT TURN FOR LOCKING**

MAKE SURE THE ARROW IS POINTING UPWARDS BEFORE INSERTING INTO THE PANEL HOLE.

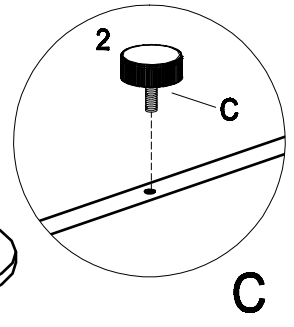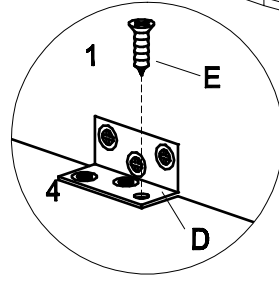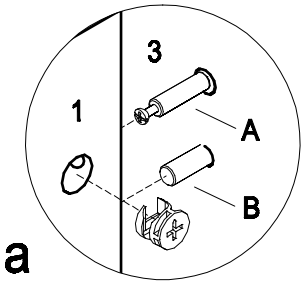

COMPLETED ASSEMBLY

**IMPORTANT NOTE:**

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.