

 

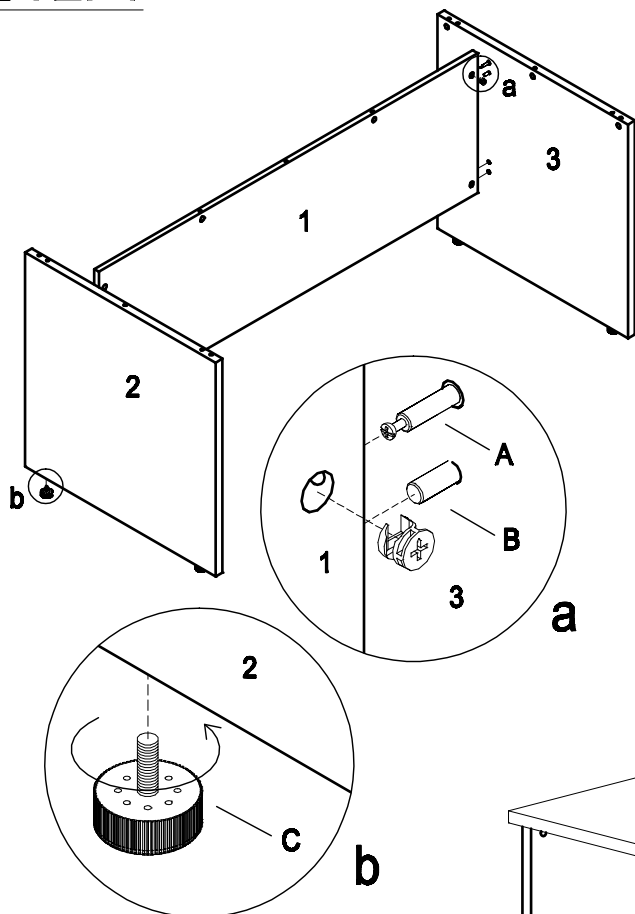 


ASSEMBLY INSTRUCTIONS


MODEL NO.:DK1575

A  12 (Ø 15x32) CAM LOCK	B  9 (Ø 8x30) DOWEL	C  4 (165x115) ADJUSTABLE GLIDE	D  2 (Ø 80) GROMMET
--	---	---	---


STEP1



 STEP2

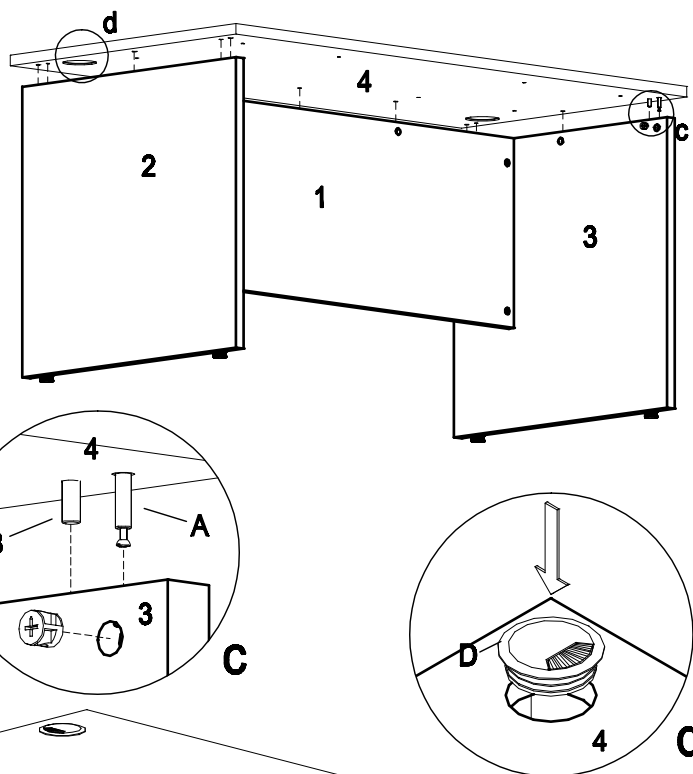

IMPORTANT:

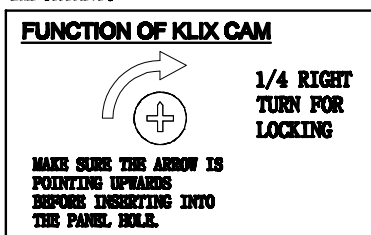 


 
 

COMPLETED ASSEMBLY

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.

ASSEMBLY INSTRUCTIONS


MODEL NO.:DK1875

A  12 (Ø 15x32) CAM LOCK	B  9 (Ø 8x30) DOWEL	C  4 (H15) ADJUSTABLE GLIDE	D  80mm Black Grommet 2Pcs
--	---	---	---

 STEP1

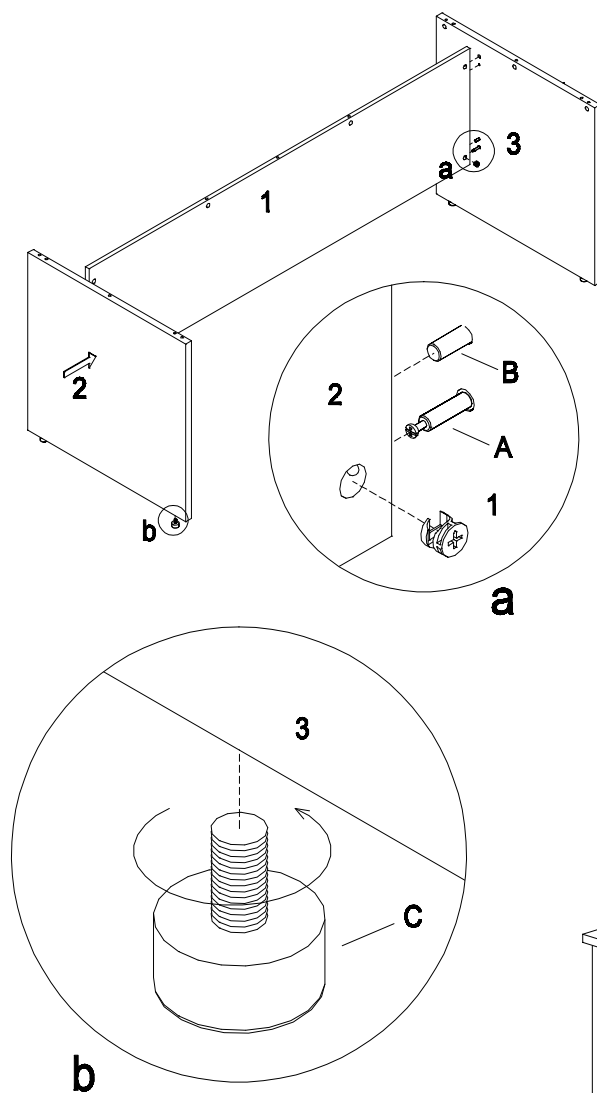

 STEP2

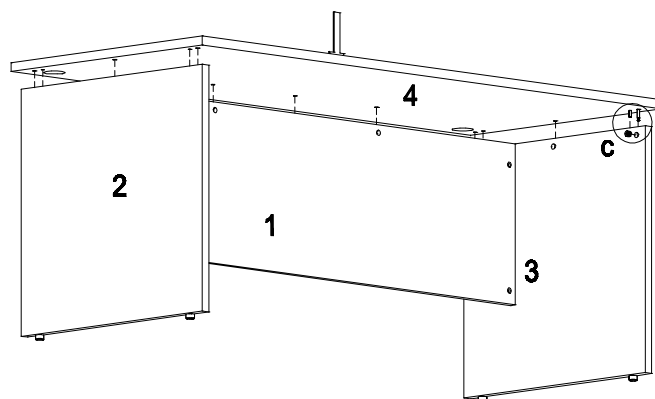



IMPORTANT:

FUNCTION OF KLIX CAM



1/4 RIGHT
TURN FOR
LOCKING

  MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL HOLE.

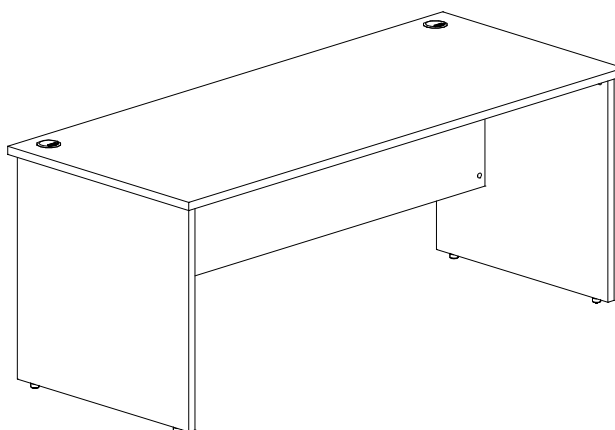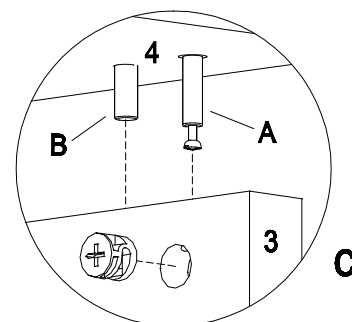


 
 

COMPLETED ASSEMBLY

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.

ASSEMBLY INSTRUCTIONS


MODEL NO.:DK189

A  12 (Ø 15x32) CAM LOCK	B  9 (Ø 8x30) DOWEL	C  4 (Ø8x115) ADJUSTABLE GLIDE	D  2 (Ø 80) GROMMET
--	---	--	---

 STEP1

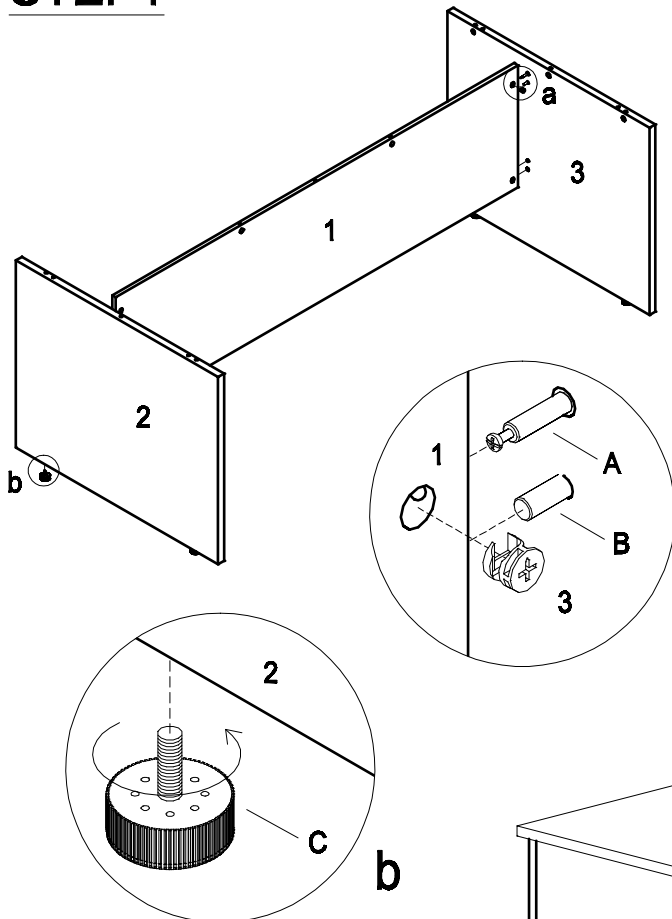


 STEP2

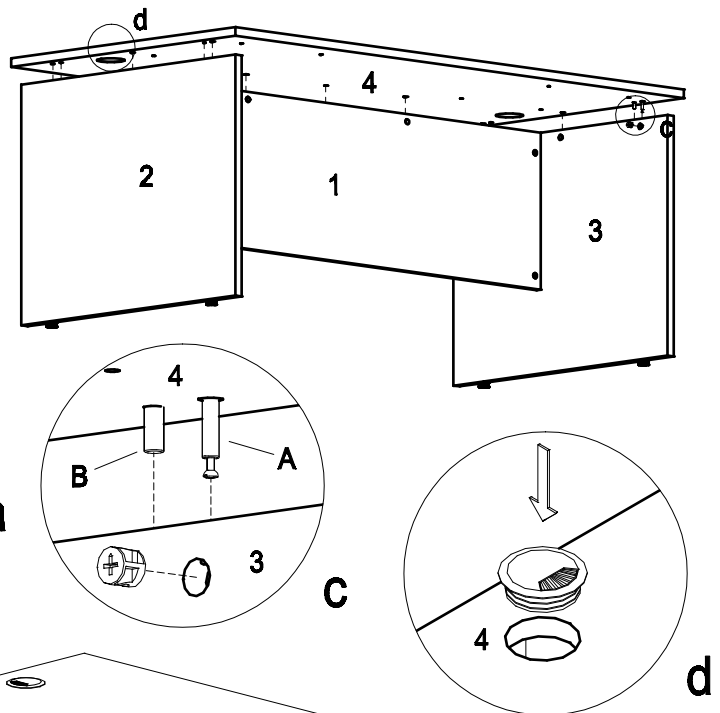

IMPORTANT:

 FUNCTION OF KLIX CAM



**1/4 RIGHT
TURN FOR
LOCKING**

MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL HOLE.

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.