



To reset your desk for the first time:

Connect the power supply. Meanwhile, the Digital Display will indicate "RST", press the button "down" and hold on until the desk reaches to the bottom, then loosen the button, the Digital Display will indicate "610". Now you can use your desk

To use your desk:

- Press button "↑" both desk legs will rise synchronously, and loosen the button, they will stop immediately.
- Press button "↓" both desk legs will down synchronously, and loosen the button, they will stop immediately.
- The desk will stop and back to a safe distance immediately when meet an obstacle.

To set the Memory Size

a) When the desk stops, press the button "S", the digital display will indicate "SET", then press the button "1" or "2" or "3" or "4", the height will be recorded.

There are totally 4 memory sizes according to the button "1" / "2" / "3" / "4". While your desk power off, the memory sizes are still available.

b) If you repeat the step a, the records can be covered.

c) After you set your memory sizes, press the button "1" / "2" / "3" / "4", the desk will go to the memory height automatically.

During its moving, press "↑" or "↓" to make it stop.

To reset your desk if the both desk legs running out of sync.

Press the button and hold on until the desk reaches its bottom, the Digital Display will indicate "RST", then loosen the button. Press the button once again until the desk rise 5mm up, then loosen the button and RESET completes.

REMARKS:

- When both desk legs run irregularly, the digital display will indicate "ER1" or "ER2". Then reset your desk.
- If your desk keeps moving up and down for 2 minutes, the digital display will indicate "HOT" which means the desk should be stopped in 18 minutes.
- If your desk keeps working for 3-4 times, the digital display will indicate "HOT" which means the desk should be stopped in 20 minutes. In any emergencies, you can cut off power to re-star.
- The max. loading weight of your desk is 90kgs, if over 90kgs, the digital display will indicate "ER3" or "ER4". You should take off the things less than 90kgs and the desk will re-star to work in 30 seconds.

CAUTION

- The desk should be operated under this Instruction Manual.
- The desk should be far away from the corrosivity and dusty environment.
- The desk is not waterproof.