






Cubit Corner Workstation

Leg and Beam Assembly and Timber Top Attachment Instructions

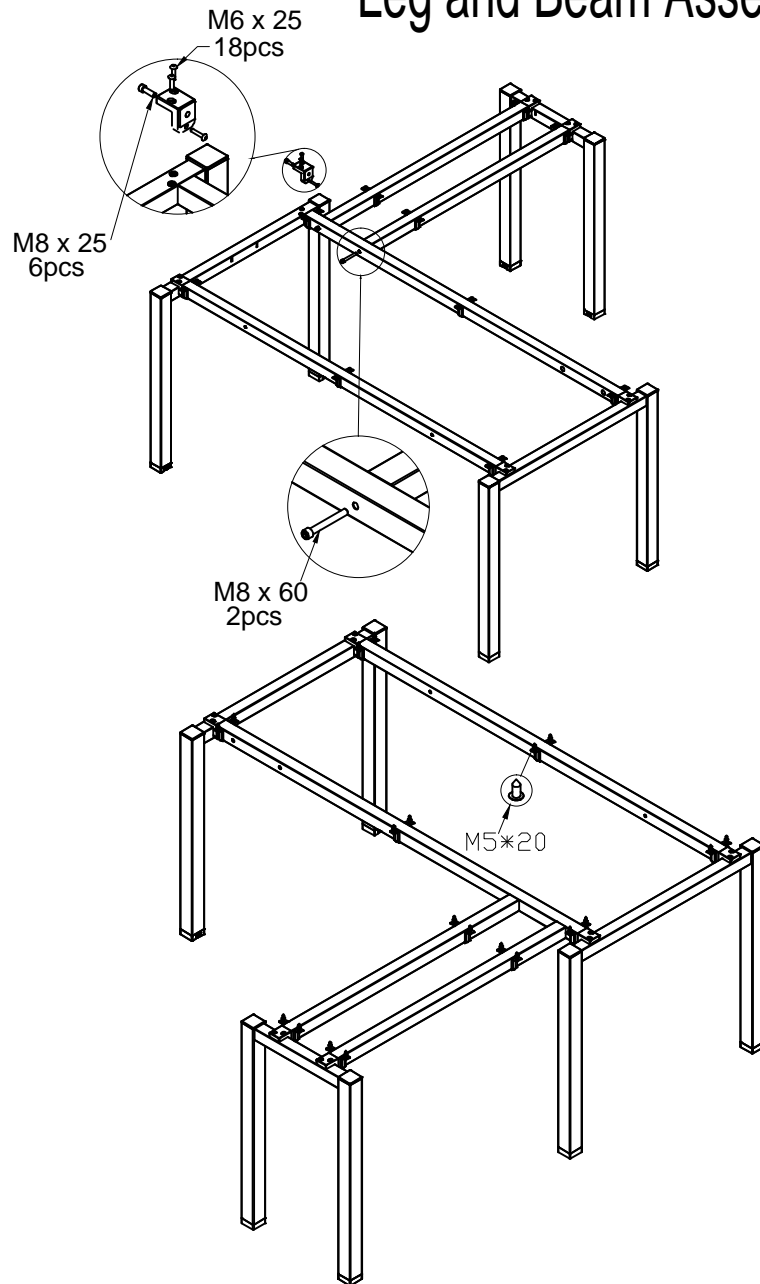

	M6 x 25 18pcs		M5 x 20 20pcs
	M8 x 25 6pcs		M8 x 60 2pcs

*** For Timber Top Fitment, First Centre Top And Ensure That The Correct Length Screw Is Used ***

