
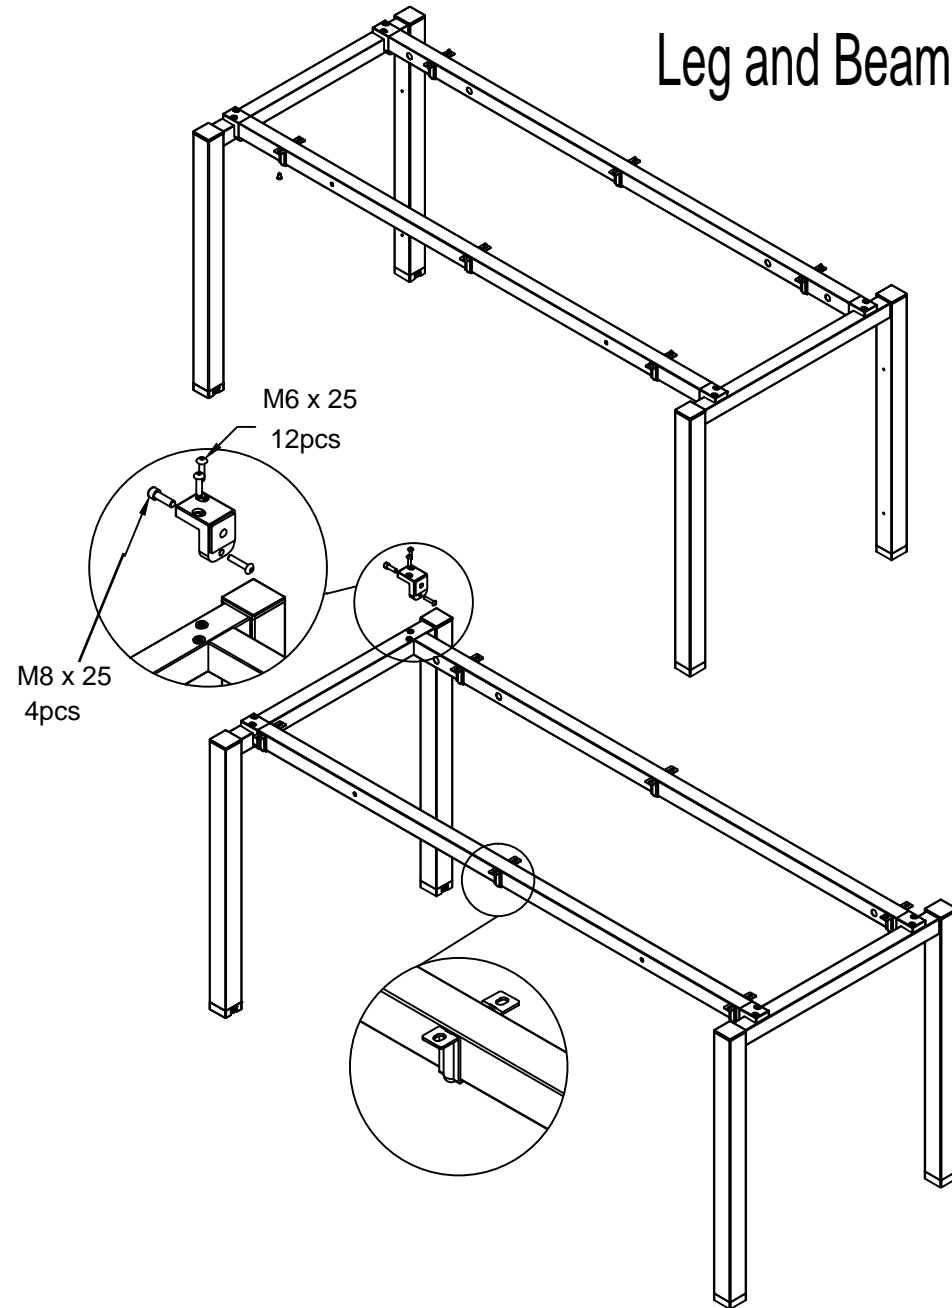




Cubit Desk

Leg and Beam Assembly and Timber Top Attachment Instructions



	M6 x 25 12pcs		M5 x 20 12pcs
	M8 x 25 4pcs		

*** For Timber Top Fitment, First Centre Top And Ensure That The Correct Length Screw Is Used ***

