

## Desk Mounted Screen installation steps – Screw in bracket type

### 1) Locate the below Screw in screen brackets, code: SB200-S

This screw type of bracket is what we use for all desk mounted screen installations.

A battery drill is recommended for the installation, 2 brackets are required per screen and the brackets come with the screws in the box.




### 2) Fit bracket to desk top, and screw into the edge of the table top

The screen can be centralized or positioned where you want it on the desk top, fix 1 bracket to the top first and then put the screen on this bracket to locate the bracket on the other end before screwing it in.



### 3) Slide screen onto bracket

Slide the screen onto the bracket, no fixings are required, the screen just sits on the desk top supported by the bracket.

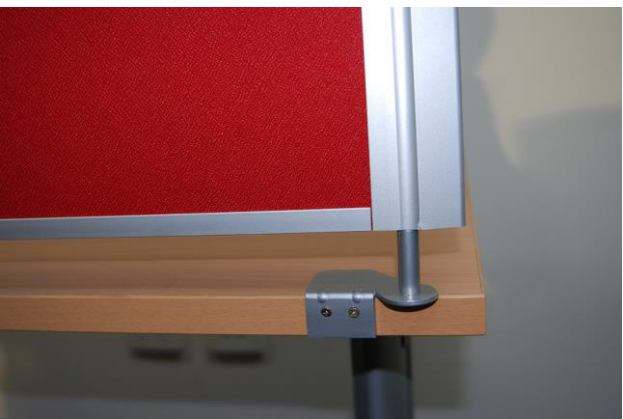

4) Screen mounting is complete

Once these steps have been followed the screen mounting to the desk is complete

