








ASSEMBLY INSTRUCTIONS


MODEL NO.:R66

A  8 (Ø 15x32) CAM LOCK	B  7 (Ø 8x30) DOWEL	C  2 (M8xH15) ADJUSTABLE GLIDE	D  2 (100x50x2) 6 HOLES PANEL	E  12+4 (4x14) SCREWS	F  2 (4x30) SCREWS
--	--	---	--	--	---

STEP1

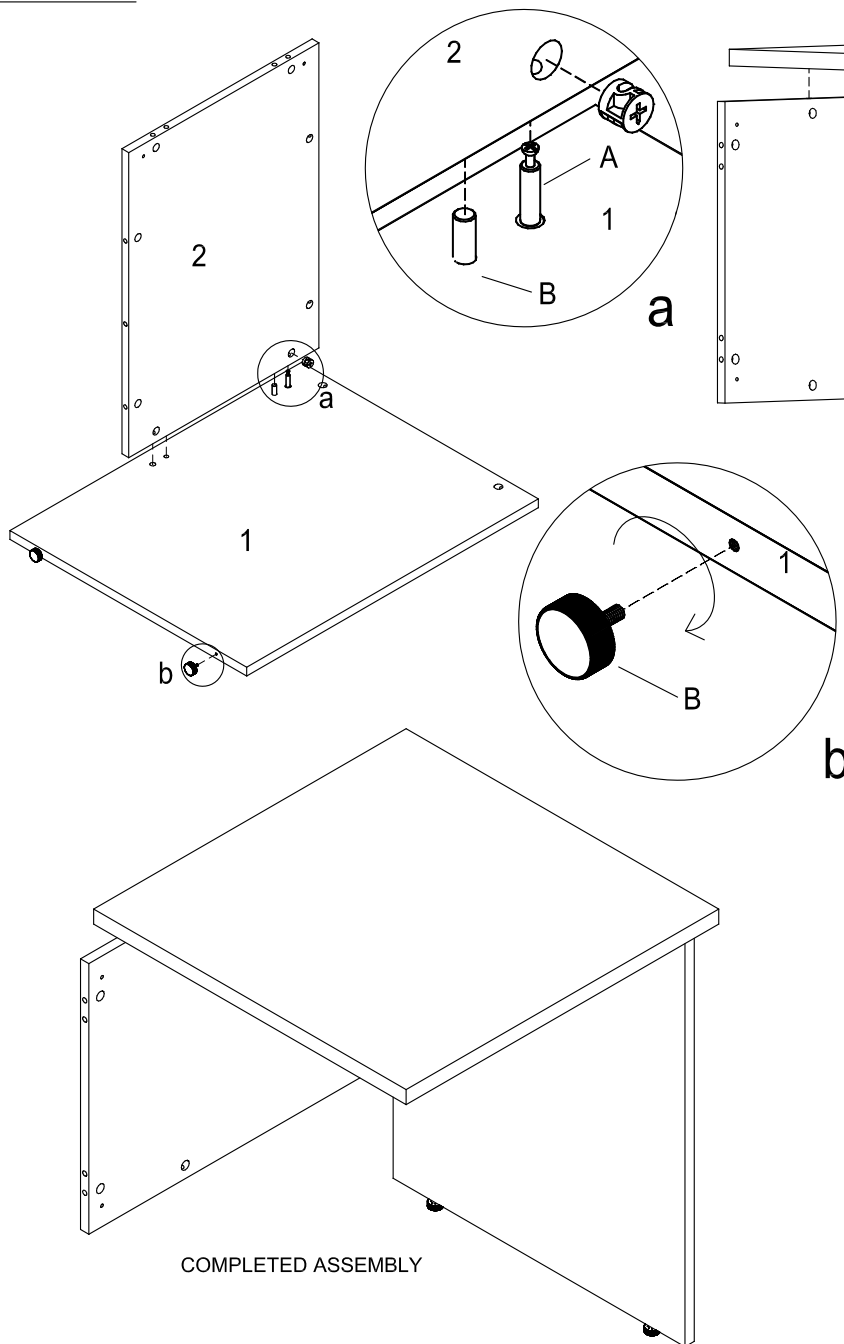

STEP2

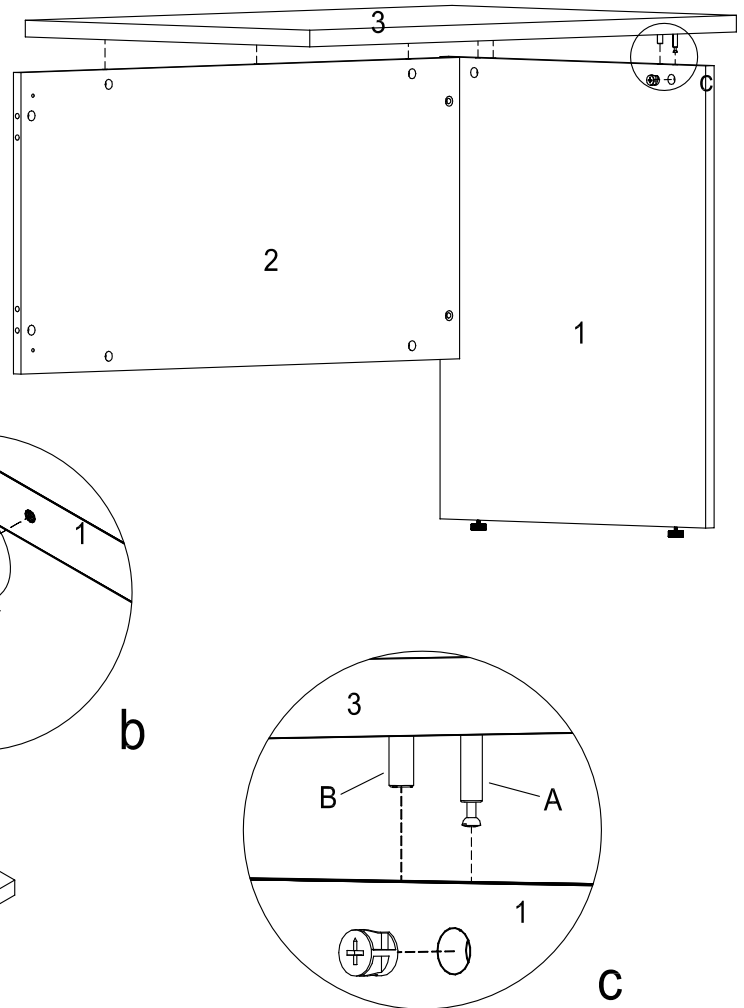

IMPORTANT:

FUNCTION OF KLIX CAM



1/4 RIGHT
TURN FOR
LOCKING






MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL HOLE.

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.

ASSEMBLY INSTRUCTIONS

MODEL NO.:Several Combination R66


A  4 (Ø 15x32) CAM LOCK	B  4 (Ø 8x30) DOWEL	C  2 (100x50x2) 6 HOLES PANEL	D  12 (4x14) SCREWS	E  2 (4x30) SCREWS
--	--	--	--	---

STEP1

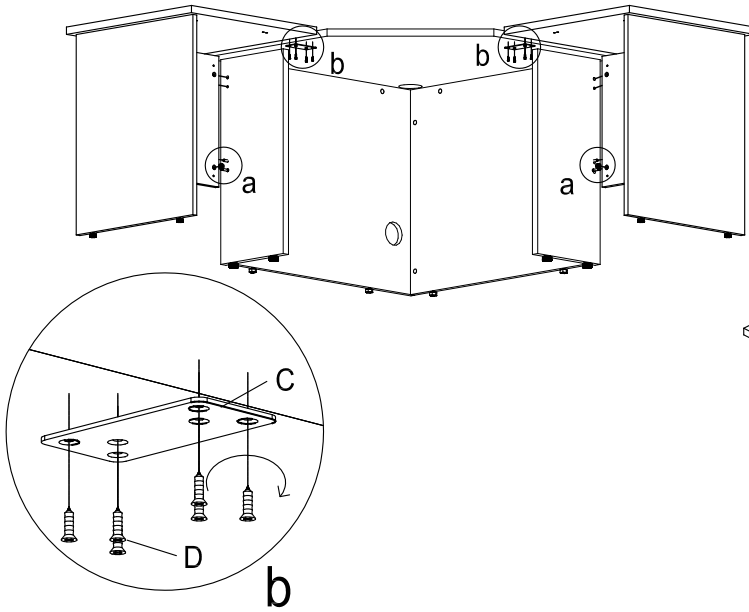


Several
Combination 1

STEP2

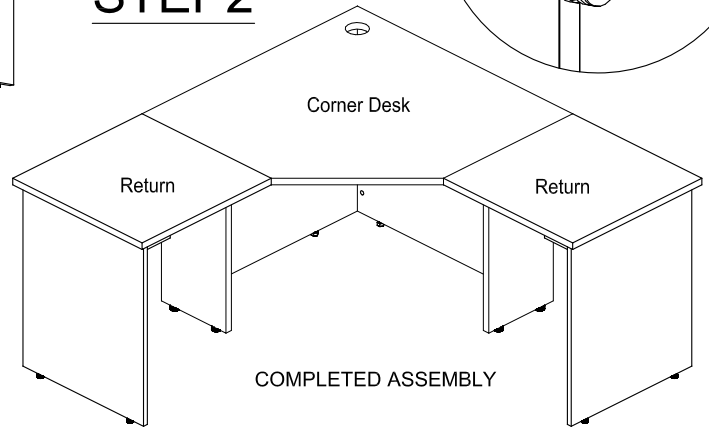

STEP1

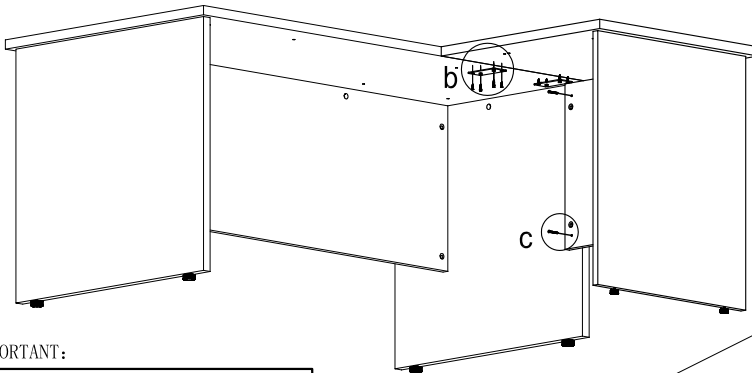

IMPORTANT:


FUNCTION OF KLIX CAM



1/4 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL HOLE.

Several
Combination 2

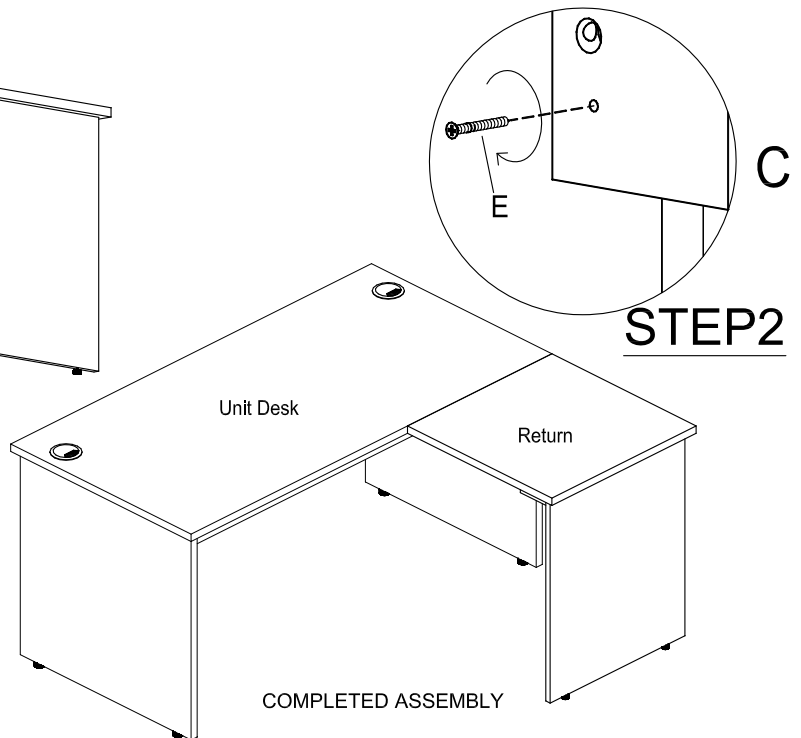







STEP2

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.

ASSEMBLY INSTRUCTIONS


MODEL NO.:R69

A  8 (Ø 15x32) CAM LOCK	B  7 (Ø 8x30) DOWEL	C  2 (M8xH15) ADJUSTABLE GLIDE	D  2 (100x50x2) 6 HOLES PANEL	E  12 (4x14) SCREWS	F  2 (4x30) SCREWS
--	--	---	--	--	---

STEP1

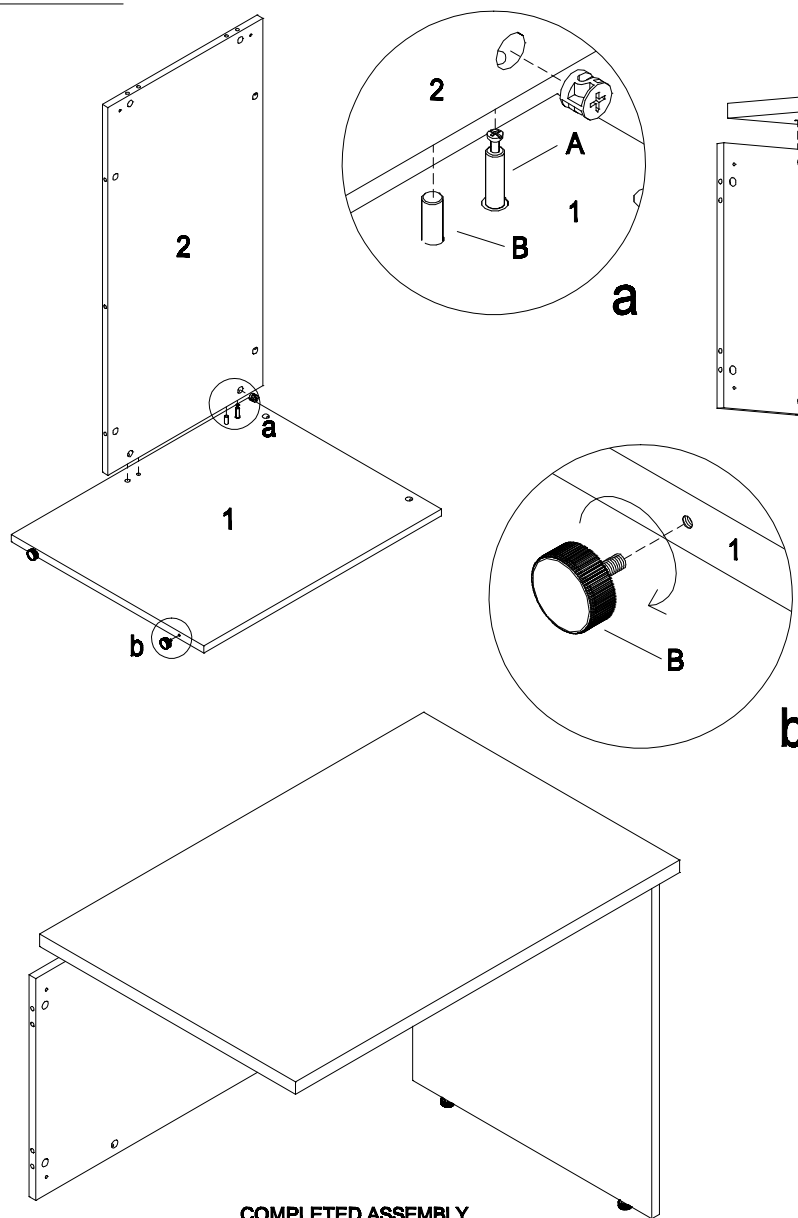

STEP2

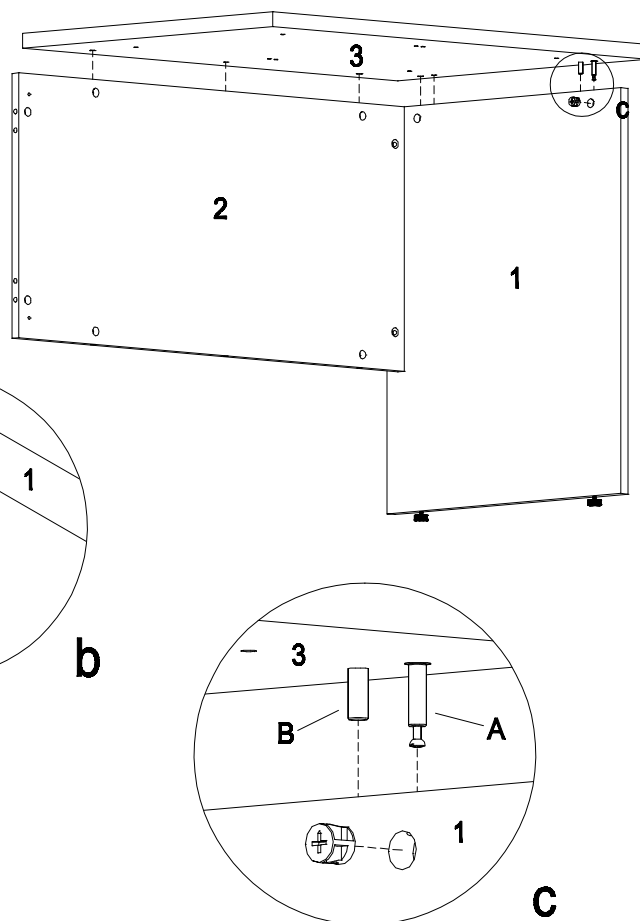

IMPORTANT:

FUNCTION OF KLIX CAM



**1/4 RIGHT
TURN FOR
LOCKING**






MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL HOLE.

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.

ASSEMBLY INSTRUCTIONS

MODEL NO.:Several Combination R69




A  4 (Ø 15x32) CAM LOCK	B  4 (Ø 8x30) DOWEL	C  2 (100x50x2) 6 HOLES PANEL	D  12 (4x14) SCREWS	E  2 (4x30) SCREWS
--	--	--	---	---

STEP1


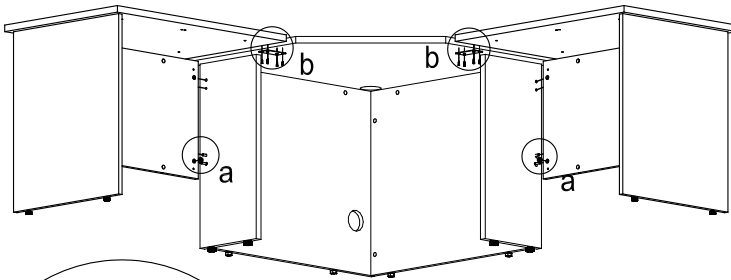


Several
Combination 1


STEP2

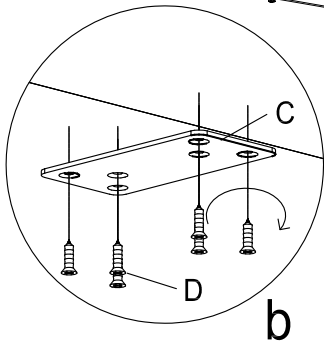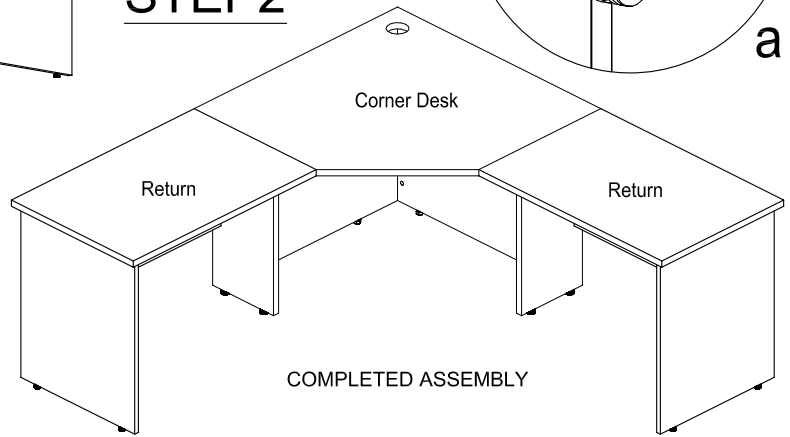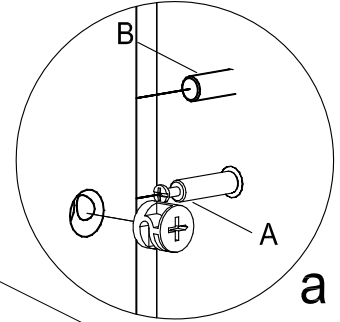

STEP1

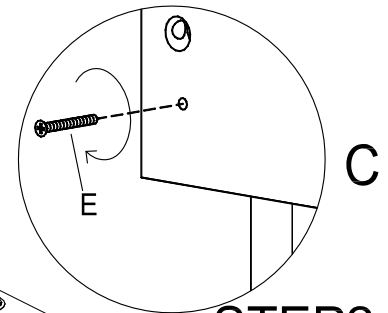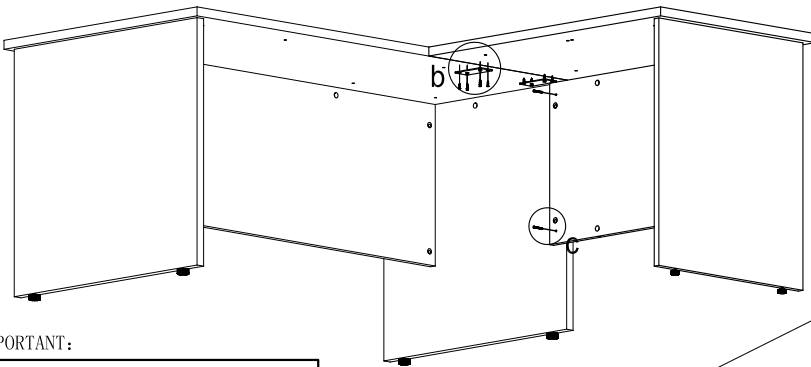

STEP2

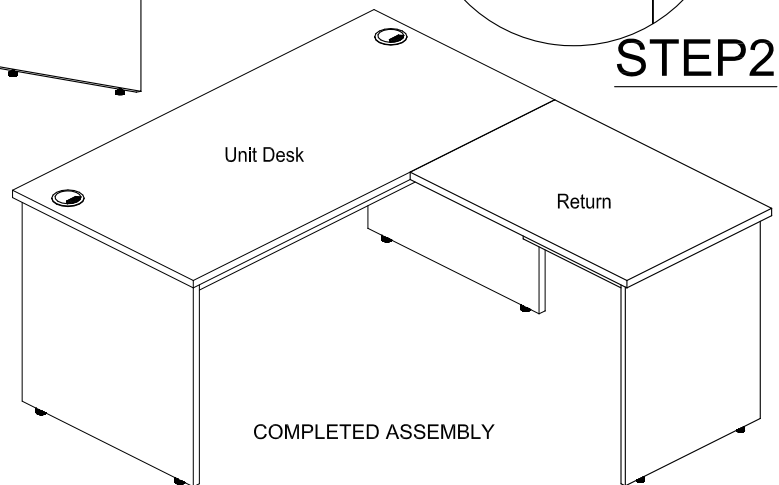

IMPORTANT:

FUNCTION OF KLIX CAM



1/4 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL HOLE.







Several
Combination 2

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.

ASSEMBLY INSTRUCTIONS

MODEL NO.:R612


A  8 (Ø 15x32) CAM LOCK	B  7 (Ø 8x30) DOWEL	C  2 (M8xH15) ADJUSTABLE GLIDE	D  2 (100x50x2) 6 HOLES PANEL	E  12 (4x14) SCREWS	F  2 (4x30) SCREWS
--	--	---	--	--	---

STEP1

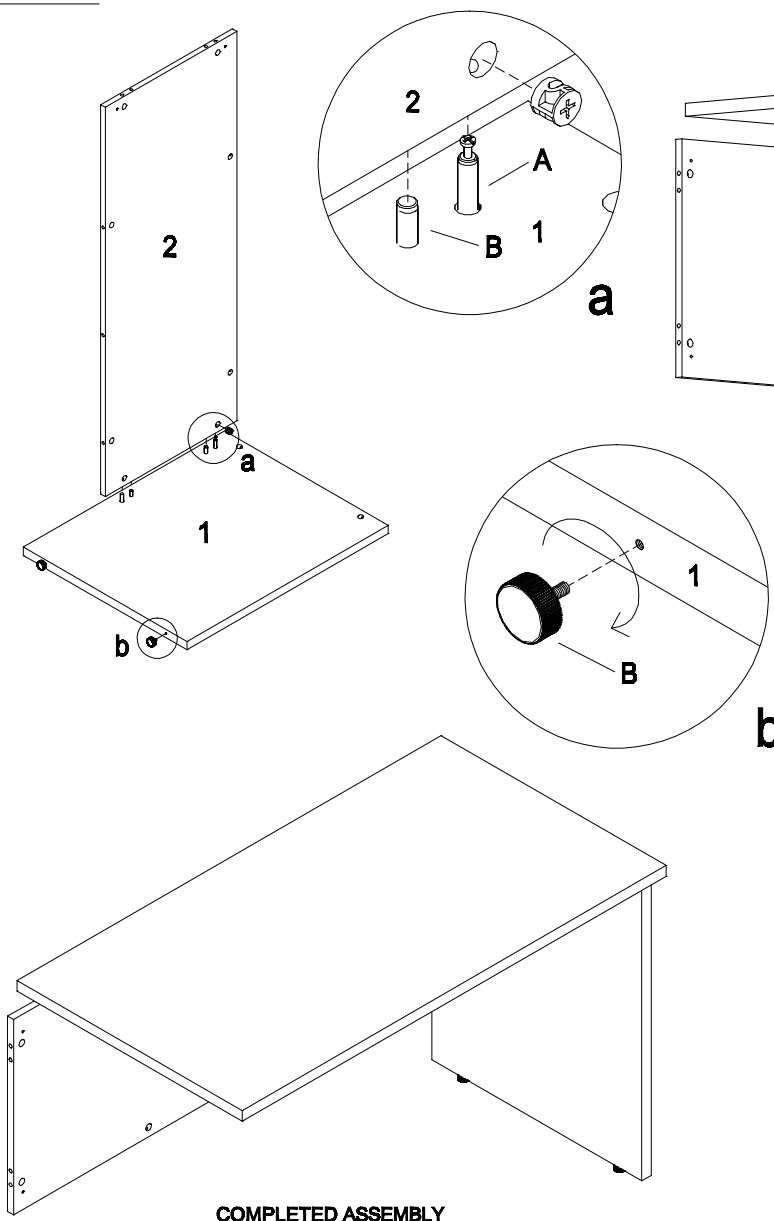

COMPLETED ASSEMBLY

STEP2

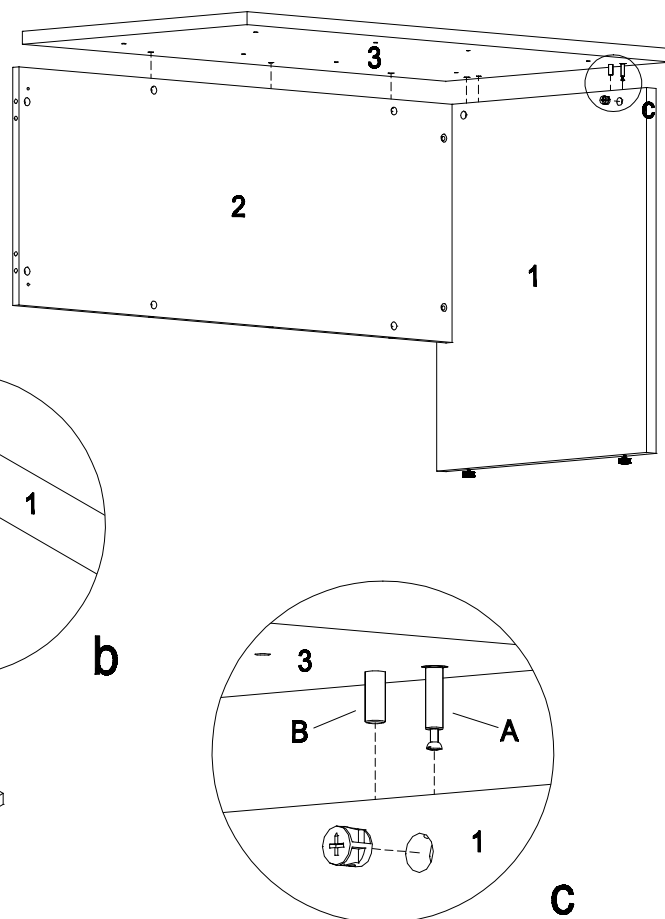

IMPORTANT:

FUNCTION OF KLIX CAM



**1/4 RIGHT
TURN FOR
LOCKING**






MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL HOLE.

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.

ASSEMBLY INSTRUCTIONS

MODEL NO.:Several Combination R612




A  4 (Ø 15x32) CAM LOCK	B  4 (Ø 8x30) DOWEL	C  2 (100x50x2) 6 HOLES PANEL	D  12 (4x14) SCREWS	E  2 (4x30) SCREWS
--	--	--	--	---

STEP1


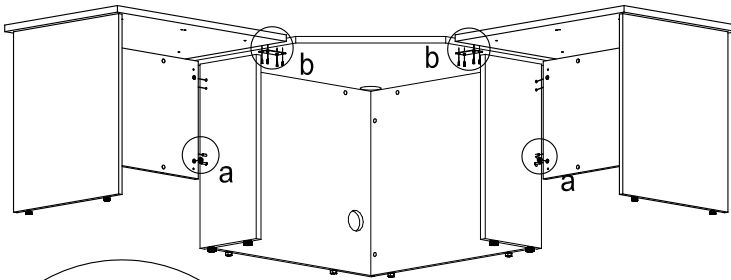


Several
Combination 1

STEP2

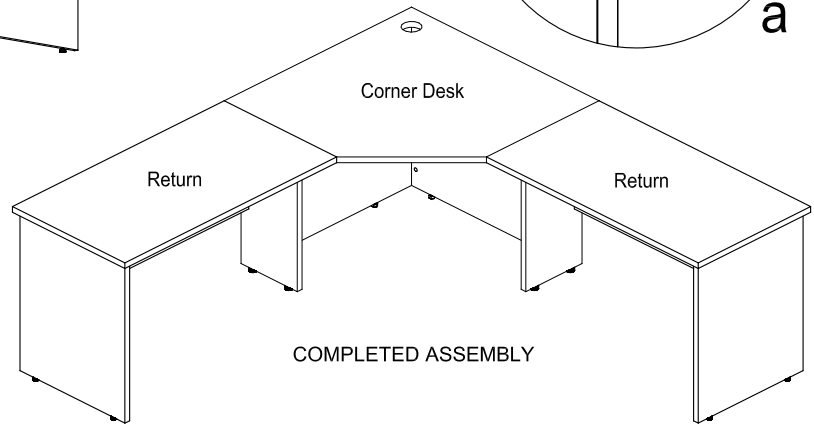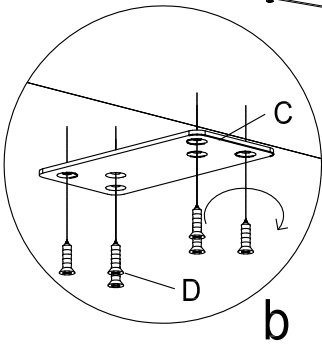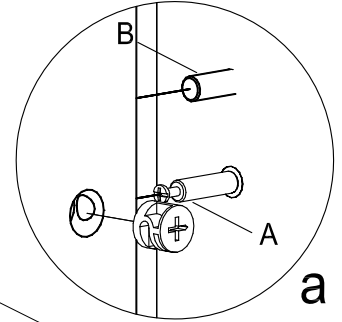

STEP1

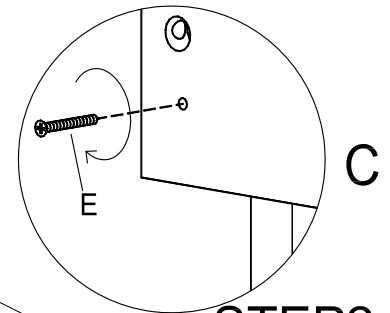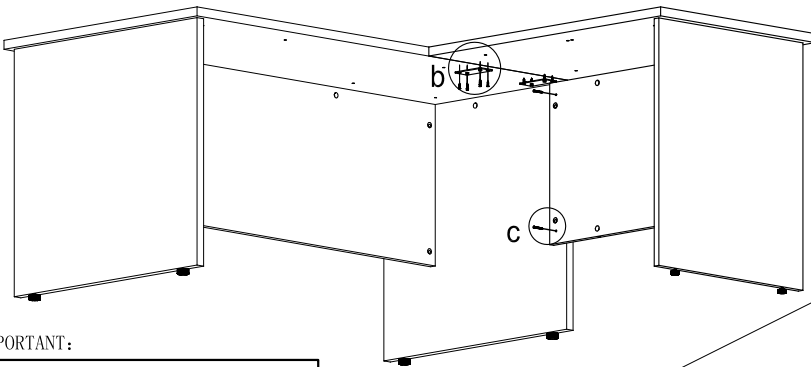

STEP2

IMPORTANT:


FUNCTION OF KLIX CAM



1/4 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL HOLE.

Several
Combination 2

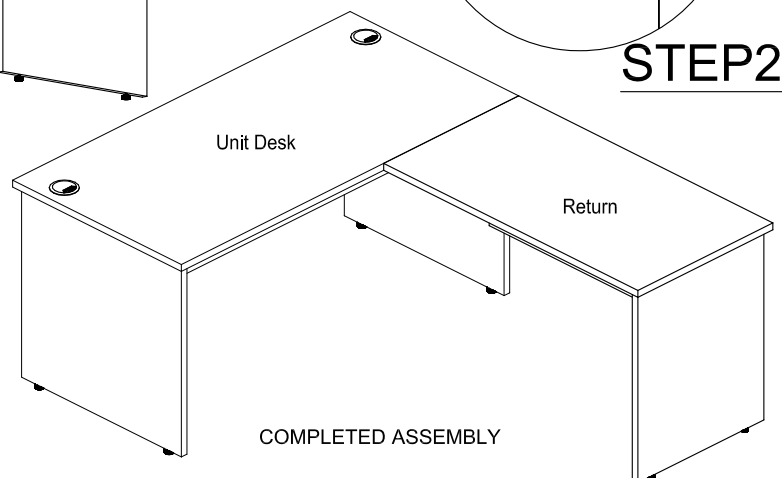







IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.

ASSEMBLY INSTRUCTIONS


MODEL NO.:R756

A  8 (Ø 15x32) CAM LOCK	B  7 (Ø 8x30) DOWEL	C  2 (M8xH15) ADJUSTABLE GLIDE	D  2 (100x50x2) 6 HOLES PANEL	E  12 (4x14) SCREWS	F  2 (4x30) SCREWS
--	--	---	--	--	---

STEP1

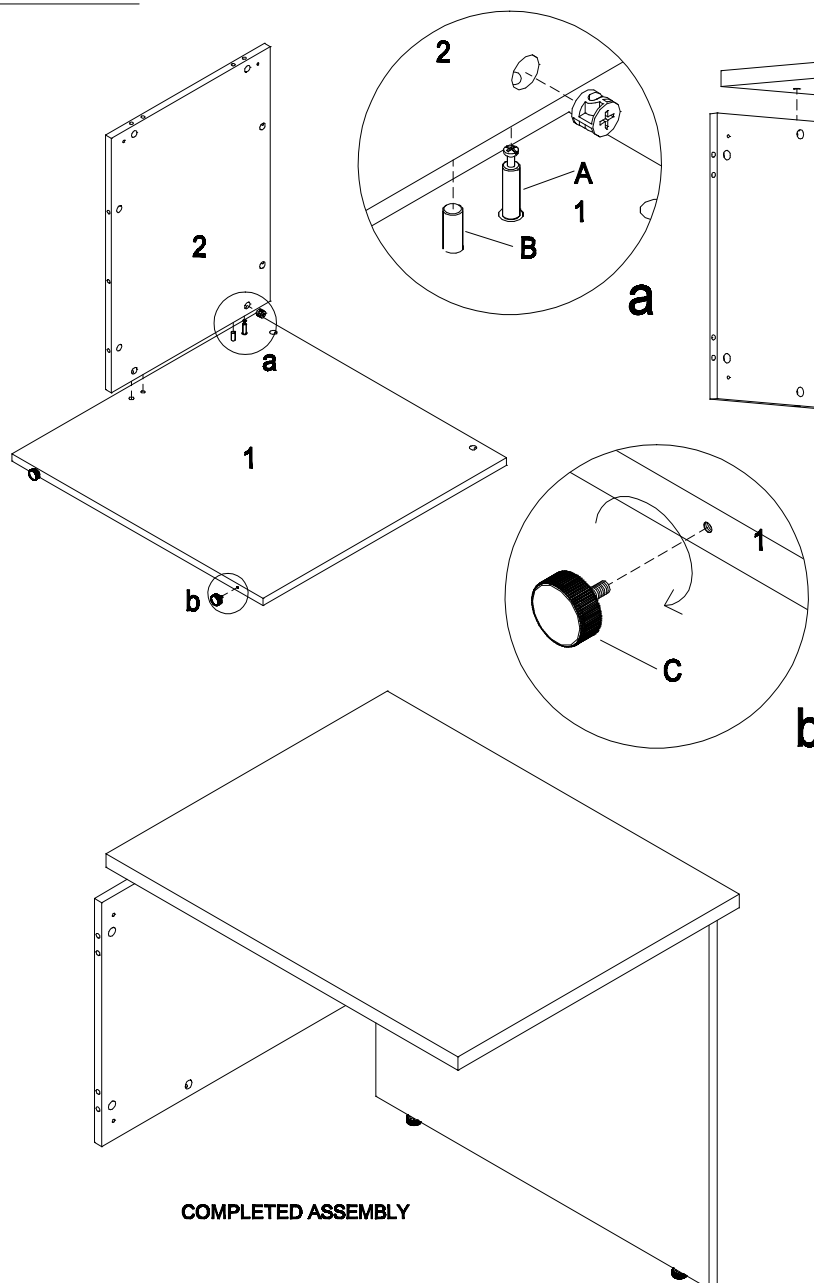

STEP2

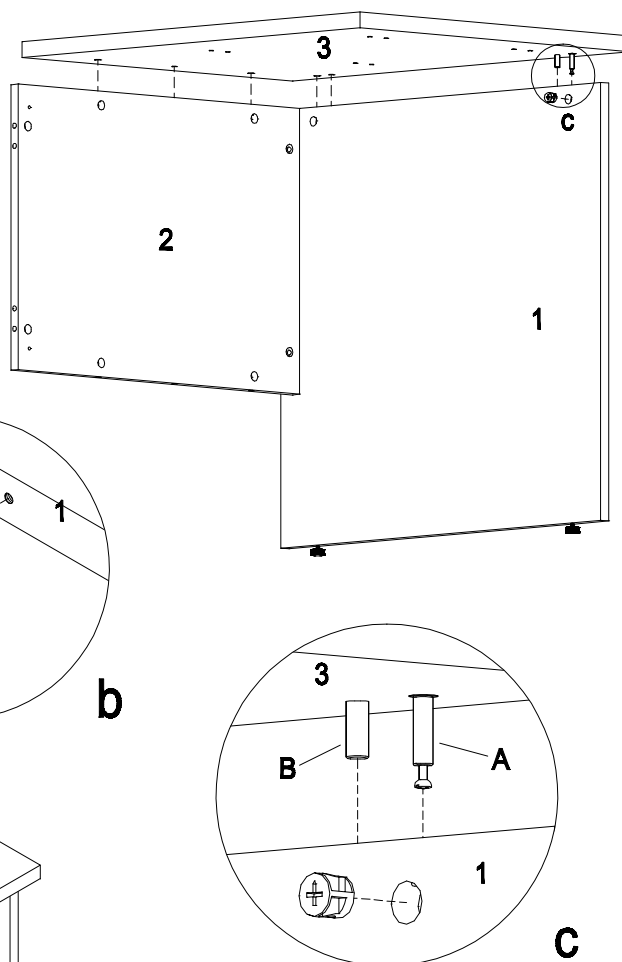

IMPORTANT:

FUNCTION OF KLDX CAM



**1/4 RIGHT
TURN FOR
LOCKING**






MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL HOLE.

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.

ASSEMBLY INSTRUCTIONS

MODEL NO.:Several Combination R756


A  4 (Ø 15x32) CAM LOCK	B  4 (Ø 8x30) DOWEL	C  2 (100x50x2) 6 HOLES PANEL	D  12 (4x14) SCREWS	E  2 (4x30) SCREWS
--	--	--	--	---

STEP1

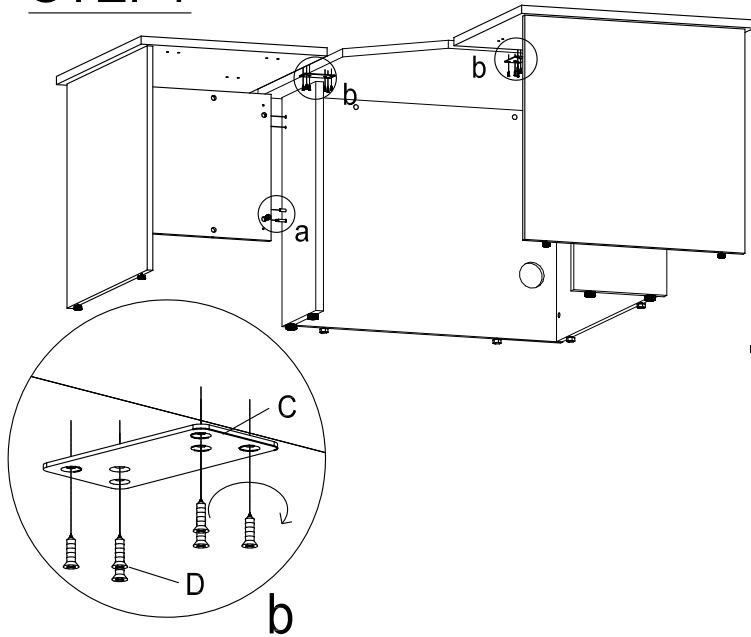


Several
Combination 1

STEP2

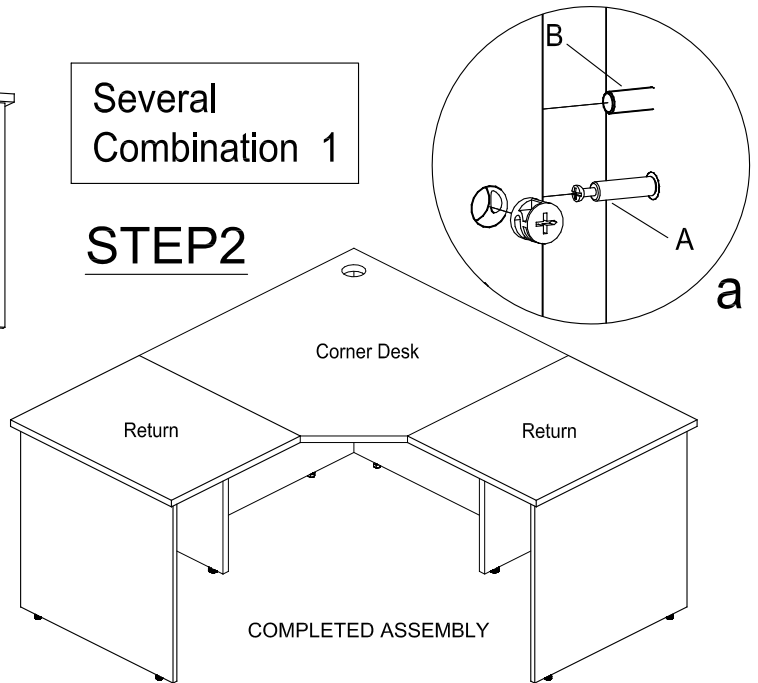

STEP1

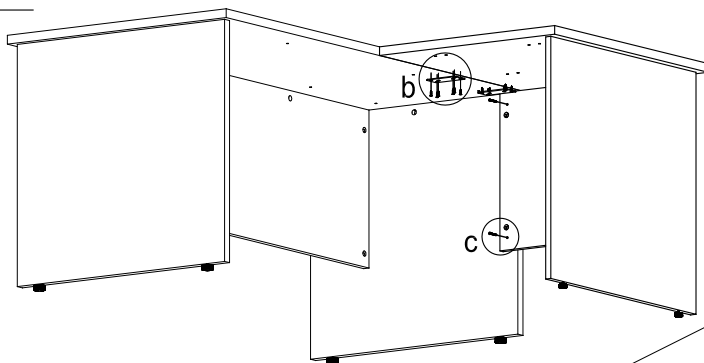

IMPORTANT:


FUNCTION OF KLIX CAM



1/4 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL HOLE.

Several
Combination 2

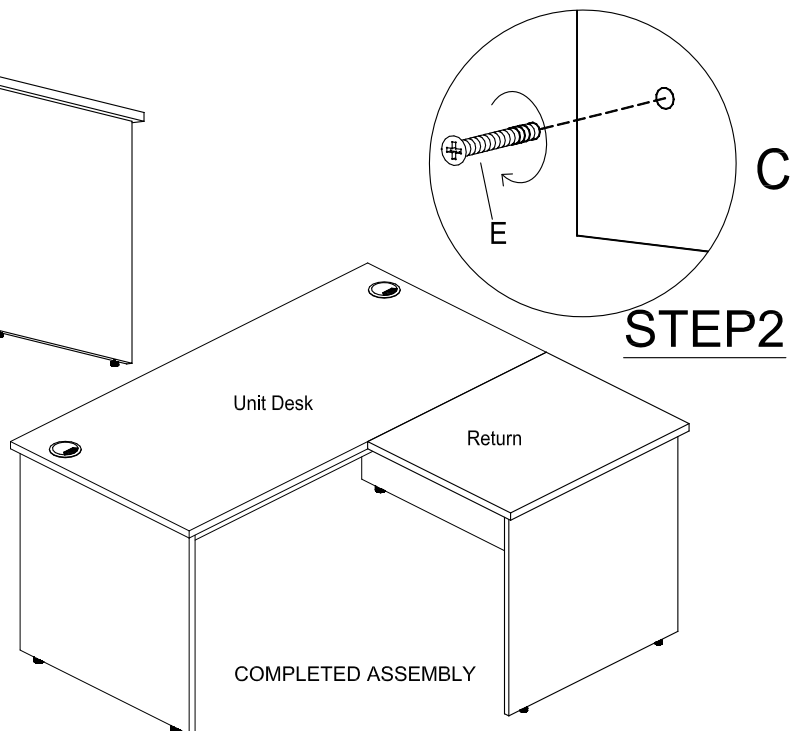







IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.


ASSEMBLY INSTRUCTIONS

MODEL NO.:R759

A  8 (Ø 15x32) CAM LOCK	B  7 (Ø 8x30) DOWEL	C  2 (M8xH15) ADJUSTABLE GLIDE	D  2 (100x50x2) 6 HOLES PANEL	E  12 (4x14) SCREWS	F  2 (4x30) SCREWS
--	--	---	--	--	---

STEP1

STEP2

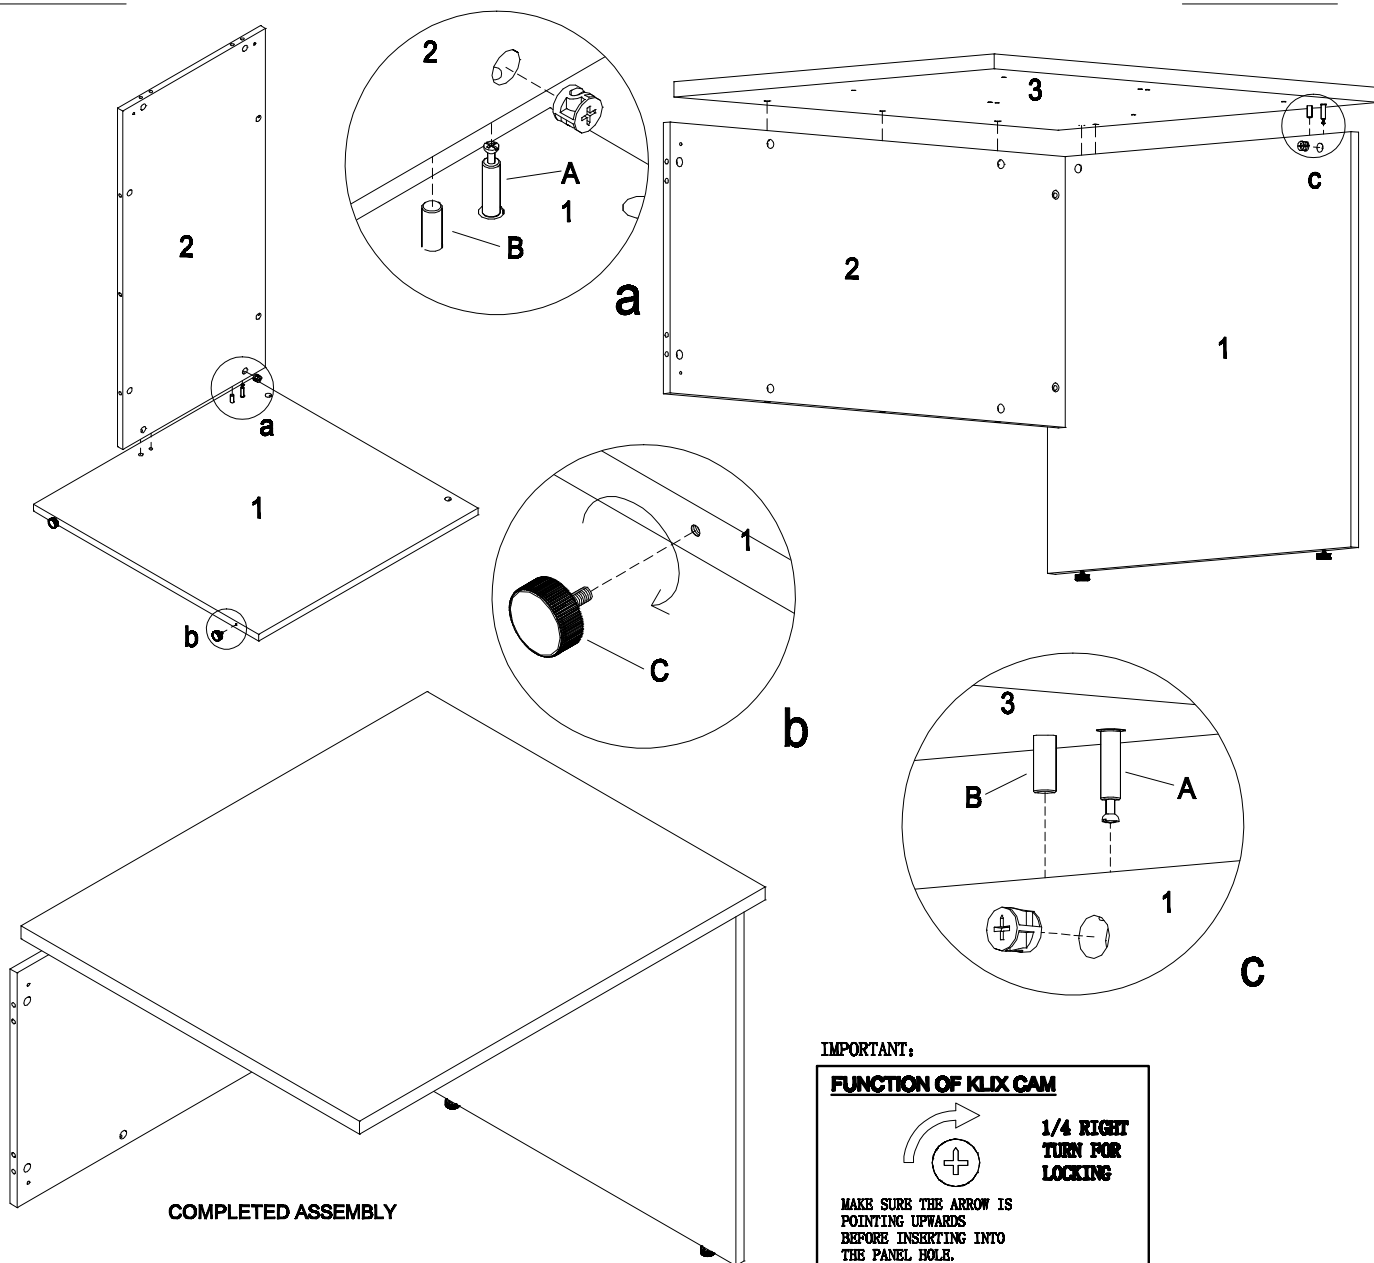






IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.

ASSEMBLY INSTRUCTIONS

MODEL NO.:Several Combination R759




A  4 (Ø 15x32) CAM LOCK	B  4 (Ø 8x30) DOWEL	C  2 (100x50x2) 6 HOLES PANEL	D  12 (4x14) SCREWS	E  2 (4x30) SCREWS
--	--	--	---	---

STEP1


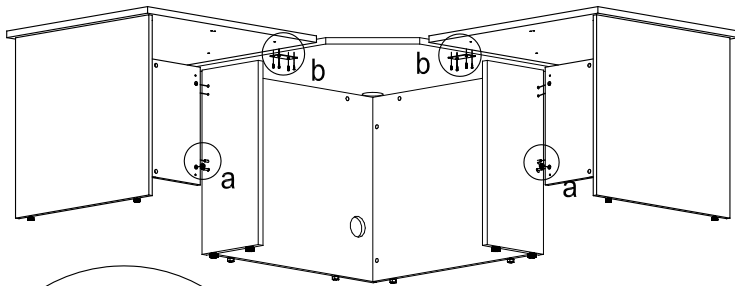


Several
Combination 1


STEP2

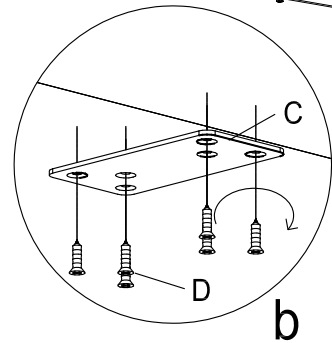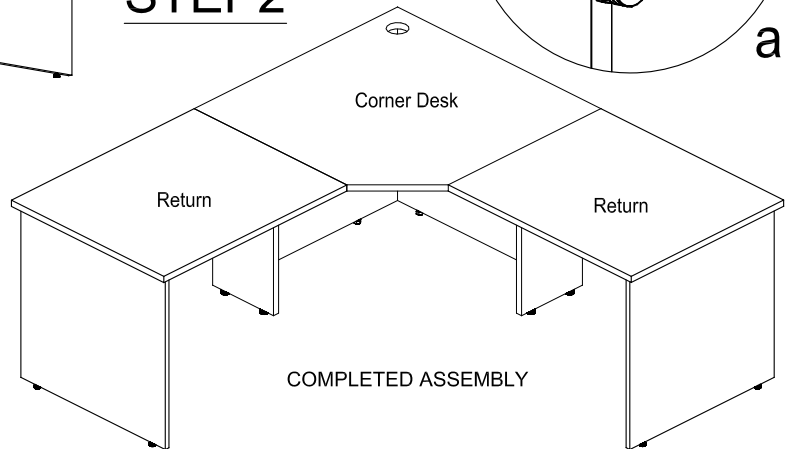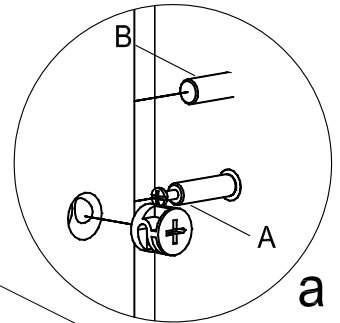

STEP1

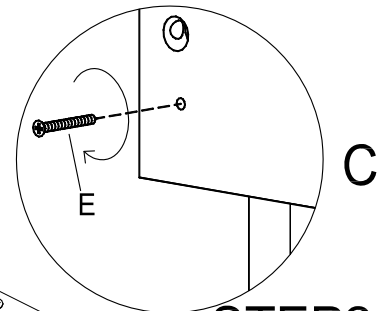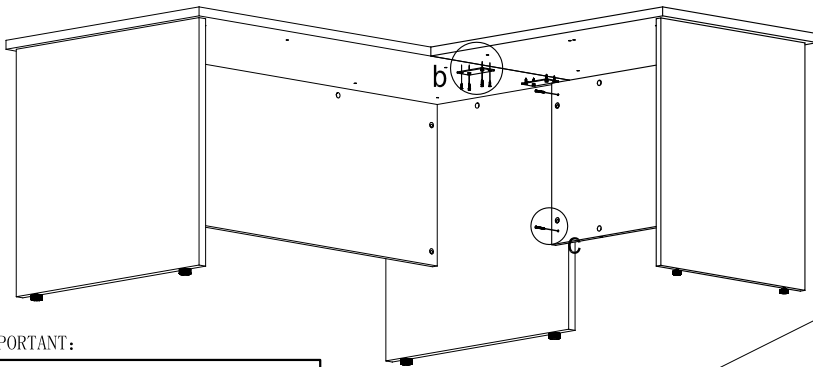

STEP2

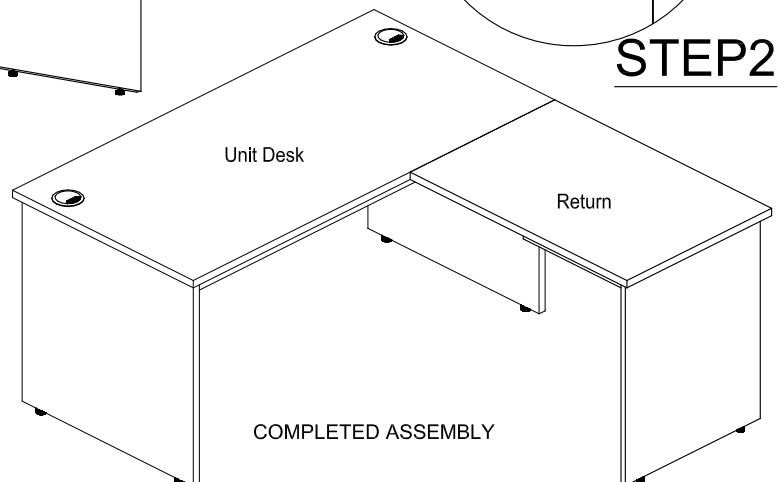

IMPORTANT:

FUNCTION OF KLIX CAM



1/4 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL HOLE.







Several
Combination 2

IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.

ASSEMBLY INSTRUCTIONS


MODEL NO.:R7512

A  8 (Ø 15x32) CAM LOCK	B  7 (Ø 8x30) DOWEL	C  2 (M8xH15) ADJUSTABLE GLIDE	D  2 (100x50x2) 6 HOLES PANEL	E  12 (4x14) SCREWS	F  2 (4x30) SCREWS
---	---	--	---	---	--


STEP1

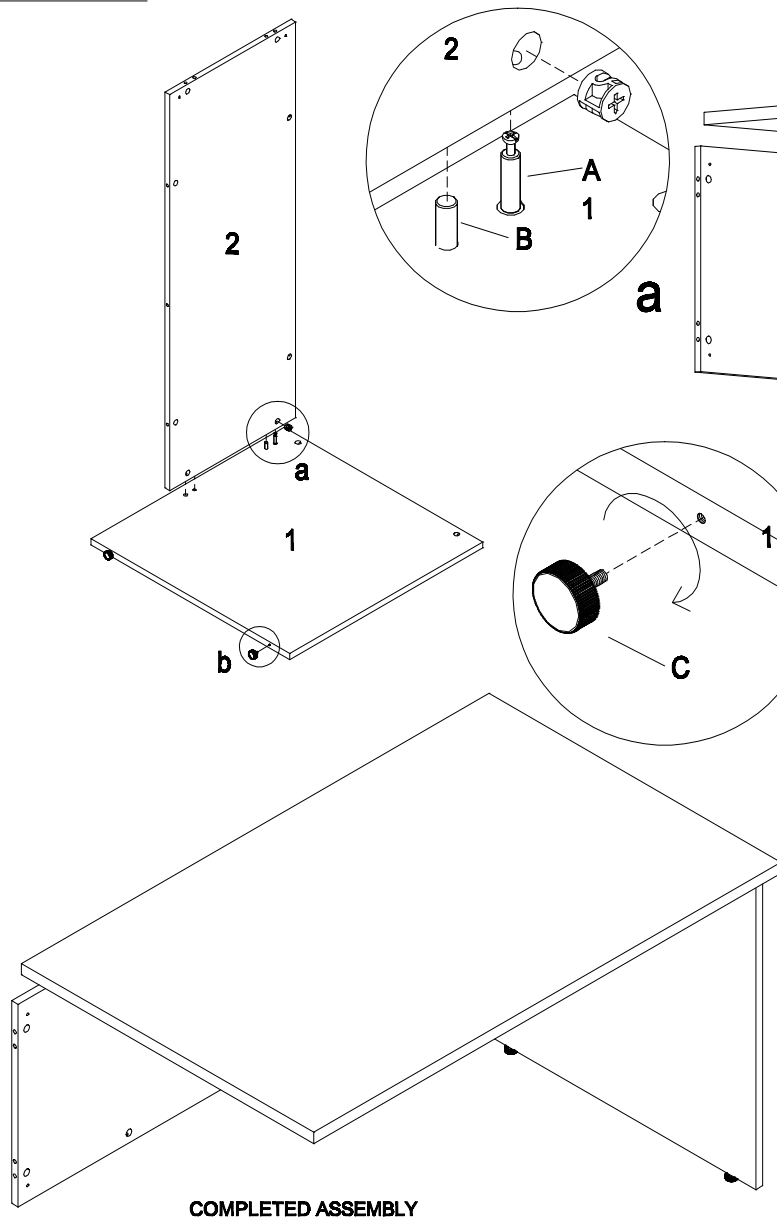

STEP2

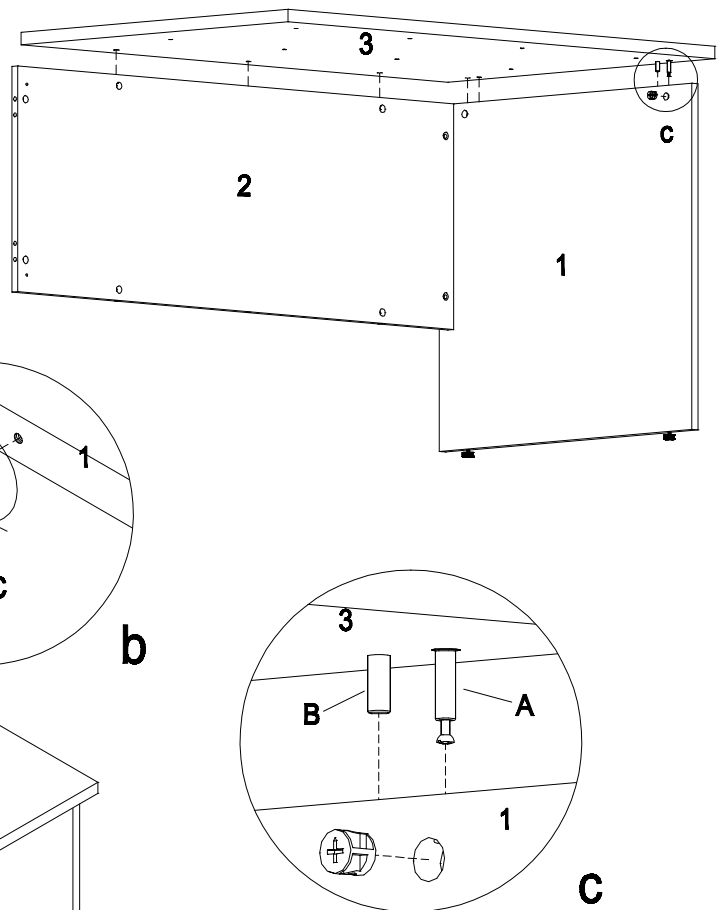

IMPORTANT:

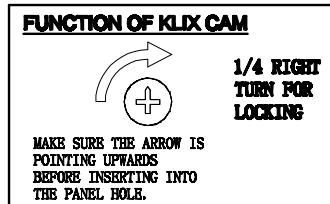






IMPORTANT NOTE:


- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.

ASSEMBLY INSTRUCTIONS

MODEL NO.:Several Combination R7512




A  4 (Ø 15x32) CAM LOCK	B  4 (Ø 8x30) DOWEL	C  2 (100x50x2) 6 HOLES PANEL	D  12 (4x14) SCREWS	E  2 (4x30) SCREWS
--	--	--	---	---

STEP1


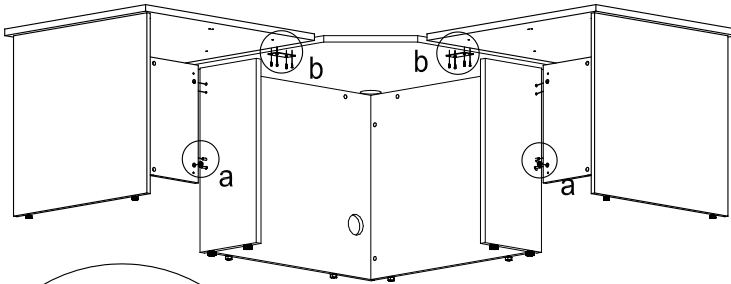


Several
Combination 1


STEP2

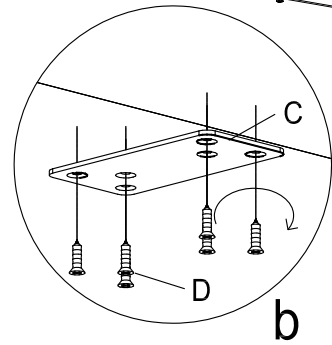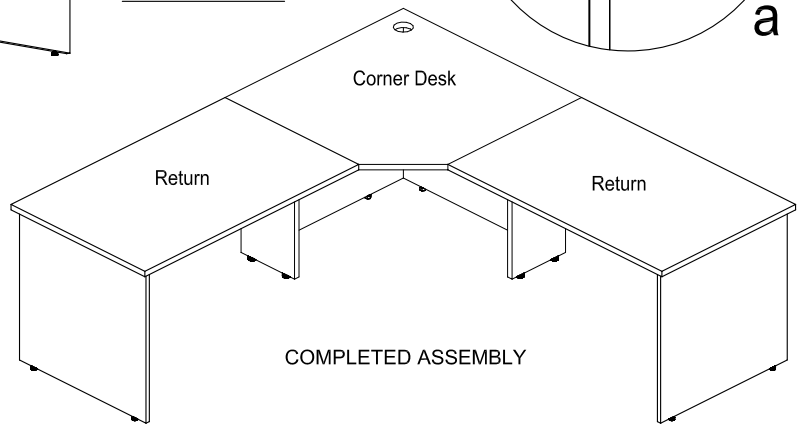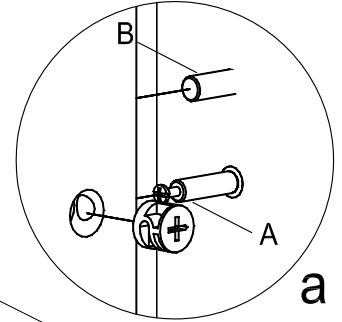

STEP1

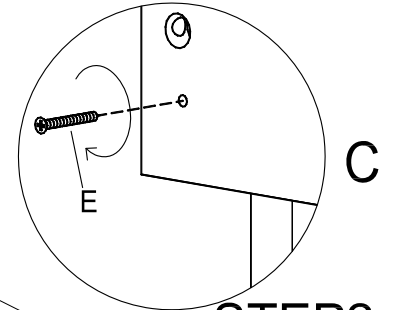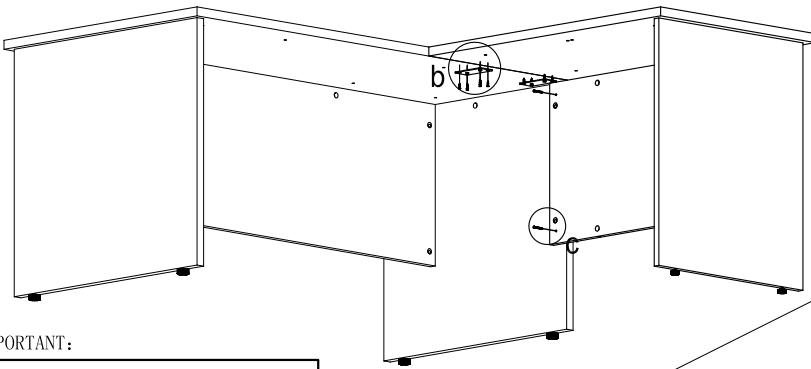

STEP2

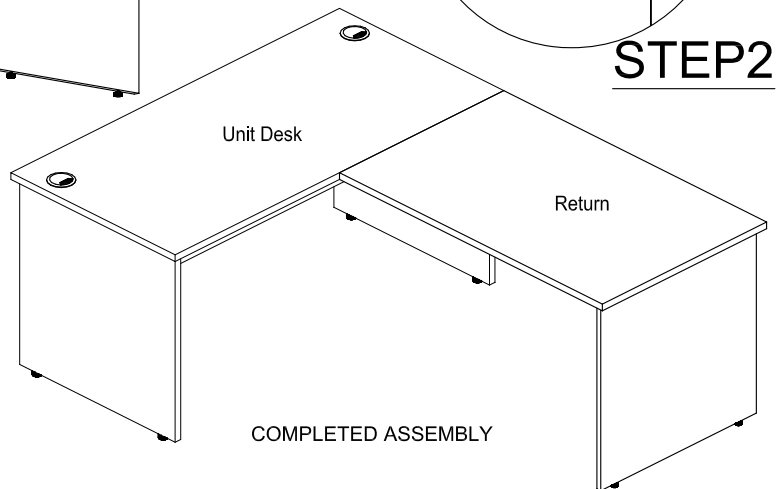

IMPORTANT:

FUNCTION OF KLIX CAM



1/4 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL HOLE.

Several
Combination 2

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.