




ALBURY 4 LEG




BDO Furniture Group
"MAKING FURNITURE EASY"

Albury Side, Albury Arm, Bronte, Chevron & Coogee Metal & Timber Chairs

PARTS:

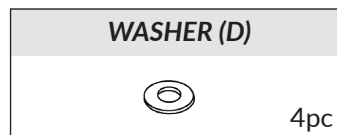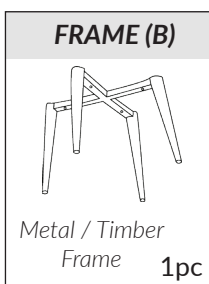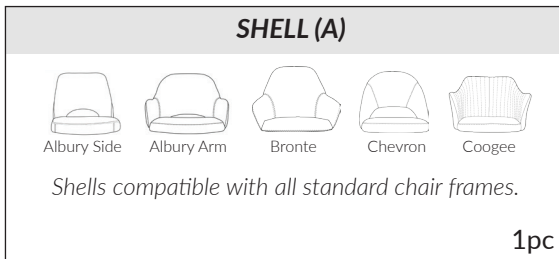

TOOLS (NOT INCLUDED):

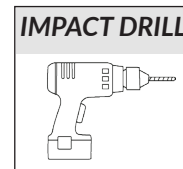

We strongly recommend applying thread lock to the full length of all screws and using an impact drill. Scan the QR code with a phone or tablet to access the assembly video.

WARNING:

Always take care with an impact drill gun, especially when screwing into the frame.

INSTRUCTIONS:

