
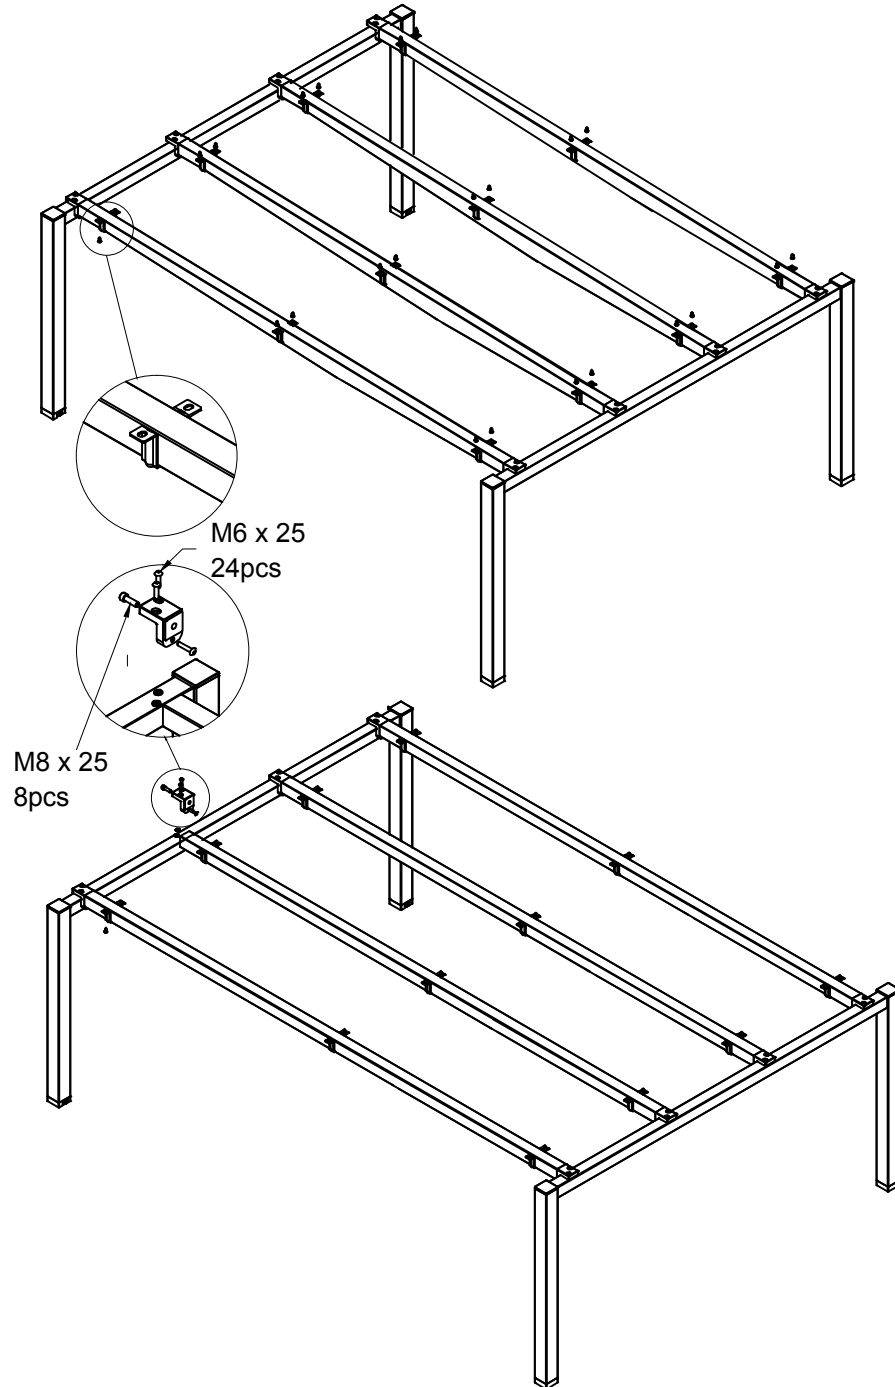




# Cubit 2 Desk Raceway - 2400 x 1500

## Leg and Beam Assembly and Timber Top Attachment Instructions



|   |                  |   |                  |
|---|------------------|---|------------------|
|  | M6 x 25<br>24pcs |  | M5 x 20<br>24pcs |
|  | M8 x 25<br>8pcs  |   |                  |

\*\*\* For Timber Top Fitment, First Centre Top And Ensure That The Correct Length Screw Is Used \*\*\*

