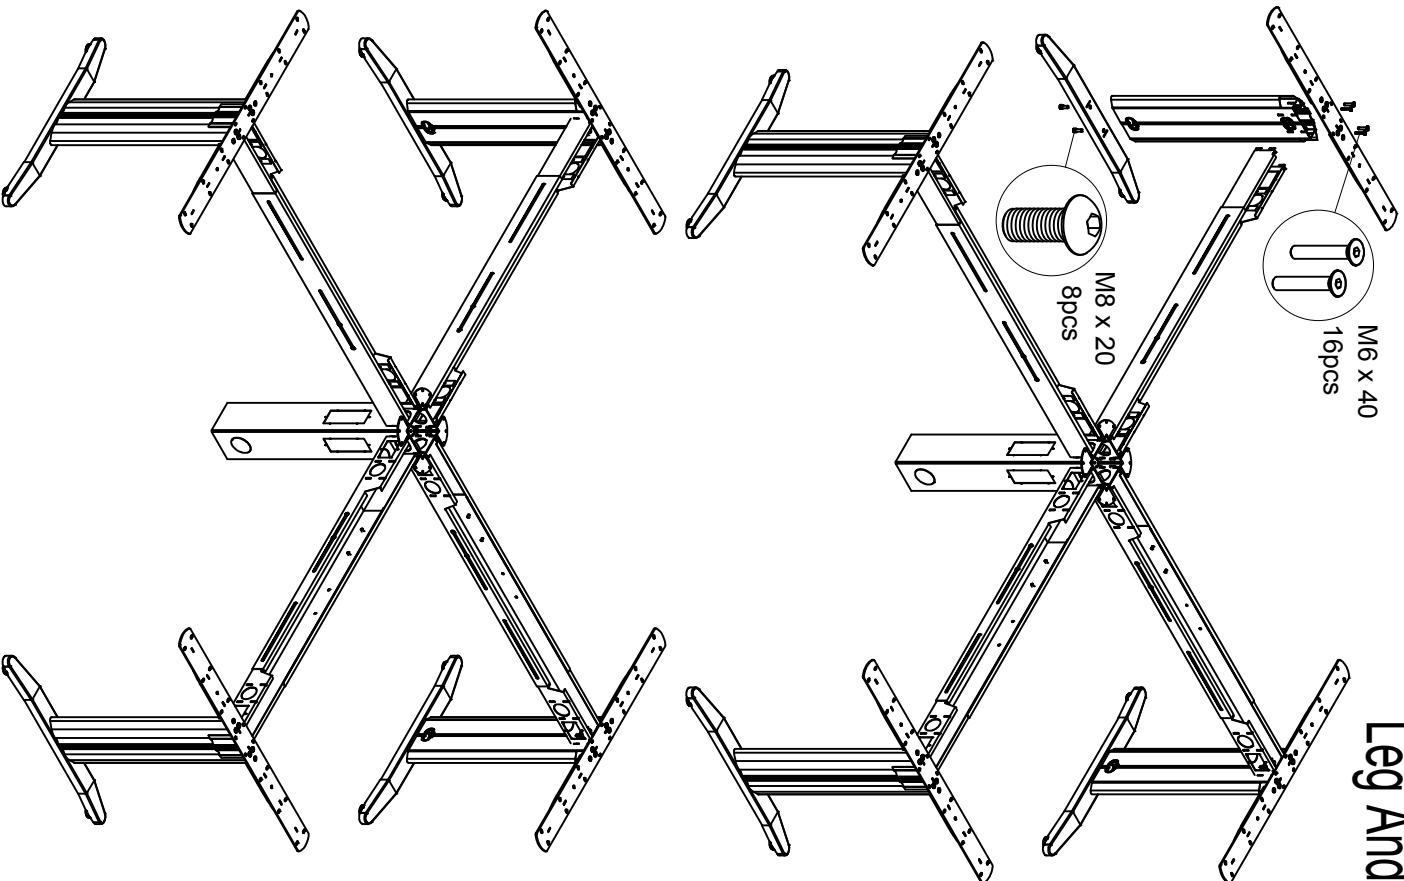





# Chicago 4 Way Workstation

## Leg And Beam Assembly And Timber Top Attachment Instructions



	M6 x 40 16pcs		M5 x 20 32pcs
	M8 x 20 8pcs		

\*\*\* For Timber Top Firment, First Centre Top And Ensure That The Correct Length Screw Is Used \*\*\*

