


Rapid Corner Workstation

Leg and Modesty Assembly and Timber Top Attachment Instructions

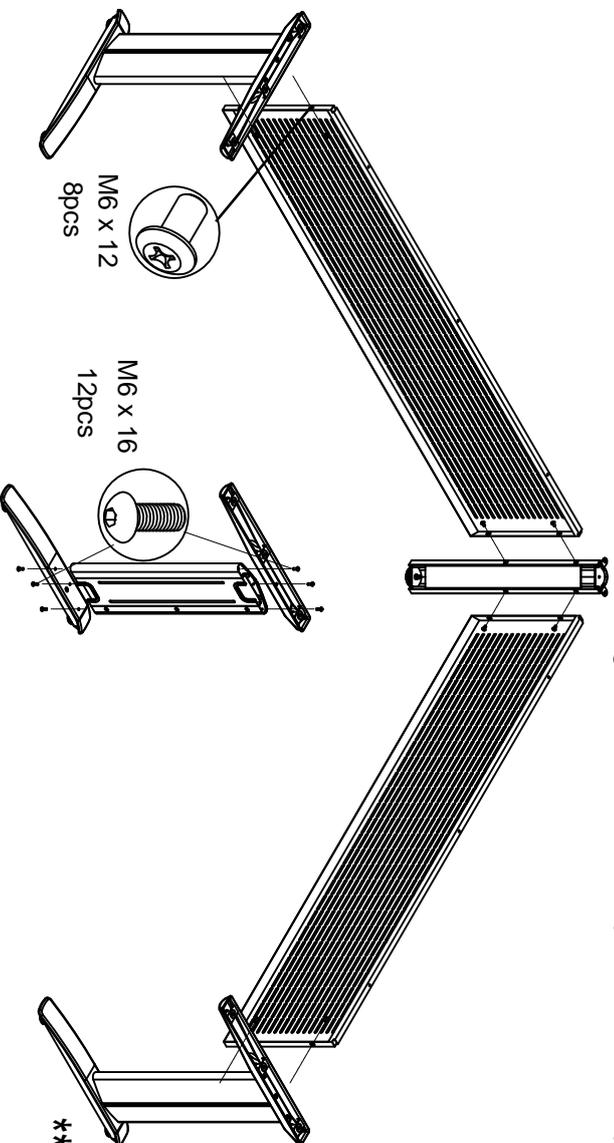

	M6 x 16 12pcs		M5 x 20 22pcs
	M6 x 12 8pcs		

*** For Timber Top Fitment, First Centre Top And Ensure That The Correct Length Screw Is Used ***

