

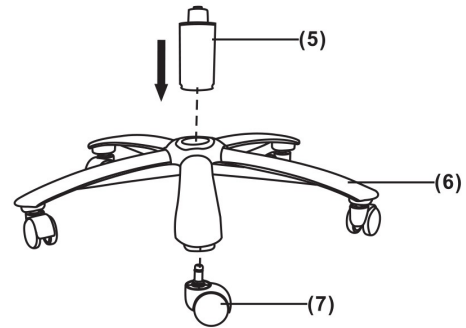
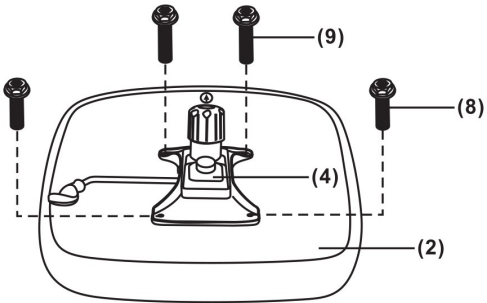




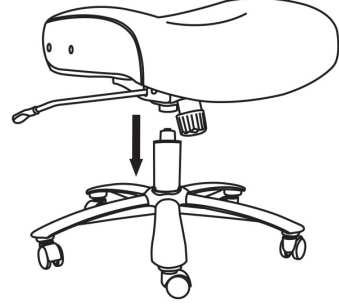
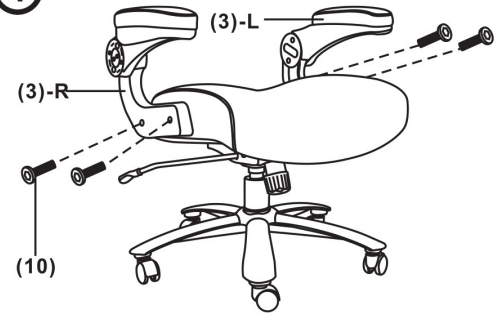




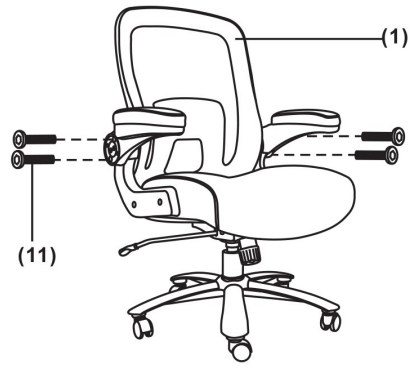
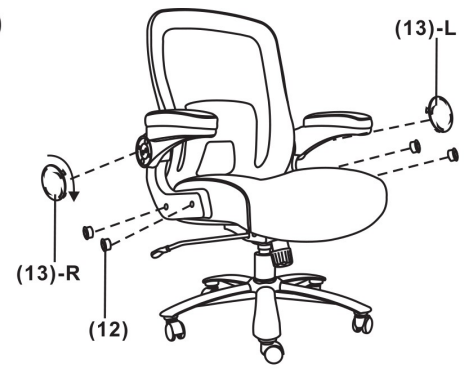






# Jet 7300 Mesh Super Heavy Duty Office Chair

## Installation Guide

|  |   |   |  |
|--|---|---|--|
| (1)X1<br>         | (8)X2<br>            | ①<br>   | ②<br>   |
| (2)X1<br>         | (9)X2<br>            |   |  |
| (3)X1(R)X1(L)<br> | (10)X4<br>           | ③<br>  | ④<br>  |
| (4)X1<br>         | (11)X4<br>           |   |  |
| (5)X1<br>       | (12)X4<br>         | ⑤<br> | ⑥<br> |
| (6)X1<br>       | (13)X1(R)X1(L)<br> |   |  |
| (7)X5<br>       | (14)X1<br>         |   |  |