

ASSEMBLY INSTRUCTIONS:

Product Code: GG09PS/ GG12PS

Product Name: GO Pull Out File Shelf for Tambour Door Cupboards



TIME REQUIRED:

10 minutes

TOOLS REQUIRED:

Screwdriver, Electric Drill, Pencil, Measuring tape / Ruler

*Tools are not included.

SKILL REQUIRED:

Easy



Hard

The Assembly Skill Rating is a 5-point system that shows the degree of effort needed in assembling a specific product. With 1 being easy for the average person and 5 requiring an expert. For most products, two persons are recommended.

NOTE

- As this is a commercial product, some intermediate skills may be required.
 - No pre-drill holes or markings are provided on our table or desktops.
 - Please check you have all hardware before assembling.
- If you are missing any hardware, please contact your Rapidline reseller. Please ensure you have the name of the item, required hardware part and quantity.
 - Please retain your receipt as proof of purchase to validate your warranty.
- Assemble on a clean, flat, smooth surface such as a rug or carpet to avoid parts from being scratched.
 - Remove all wrapping materials, including staples and packing straps before you start to assemble
 - Keep all hardware parts out of reach of children.

CAUTION





- Heavy product. Do not attempt to lift or move without help.
- Do not tighten screws and bolts until completely assembled.
- Do not use this product unless all bolts and screws are firmly secured and tightened.

WARNING


- If parts are missing, broken, damaged or worn stop using the product until all repairs are made.
 - Failure to follow these warnings could result in serious injury.

ASSEMBLY INSTRUCTIONS AMPORS (PULL OUT REFERENCE SHELF)


PART LIST		
Part No	Component	Quantity
01	PULL OUT SHELF	01
02	SLIDE RH SIDE	01
03	SLIDE LH SIDE	01

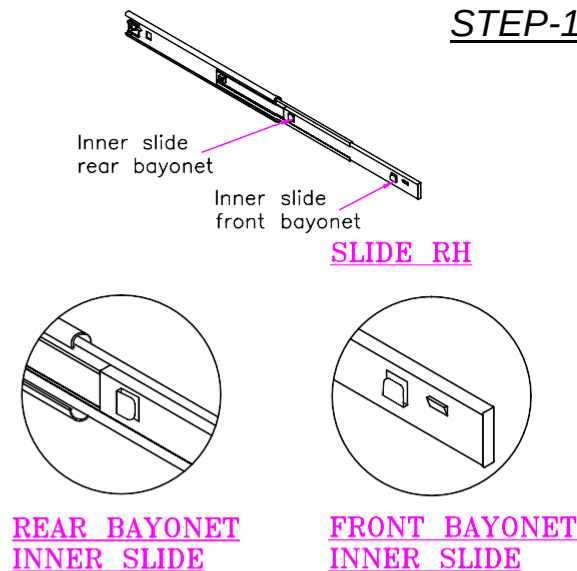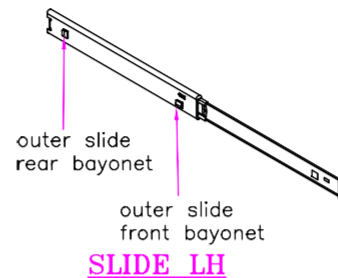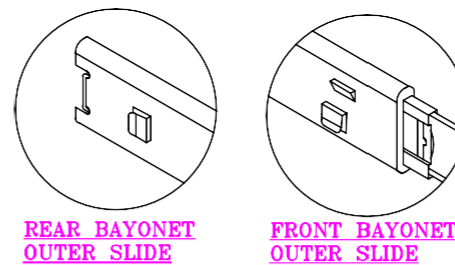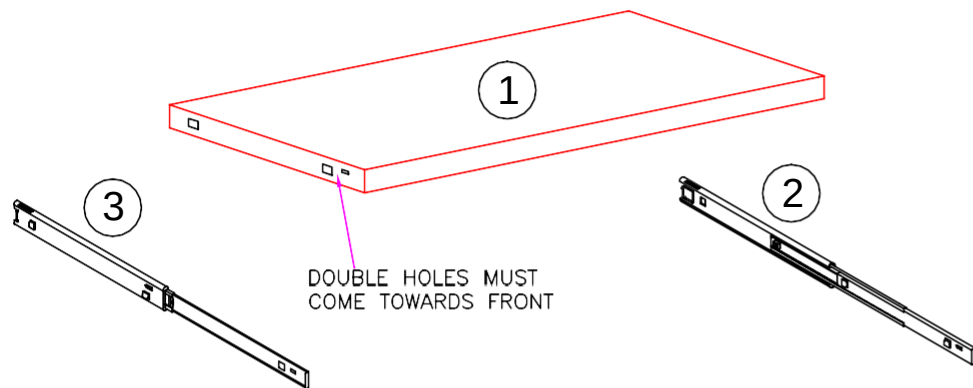

1. IDENTIFY THE SLIDES by Holding both the slides together in such a way that the inner bayonets of the slides comes in contact.
2. Now check for the RH and LH slides as shown above. The front bayonets of outer slides must come towards the assembler and the bayonet direction must be downward as shown in the above diagrams.

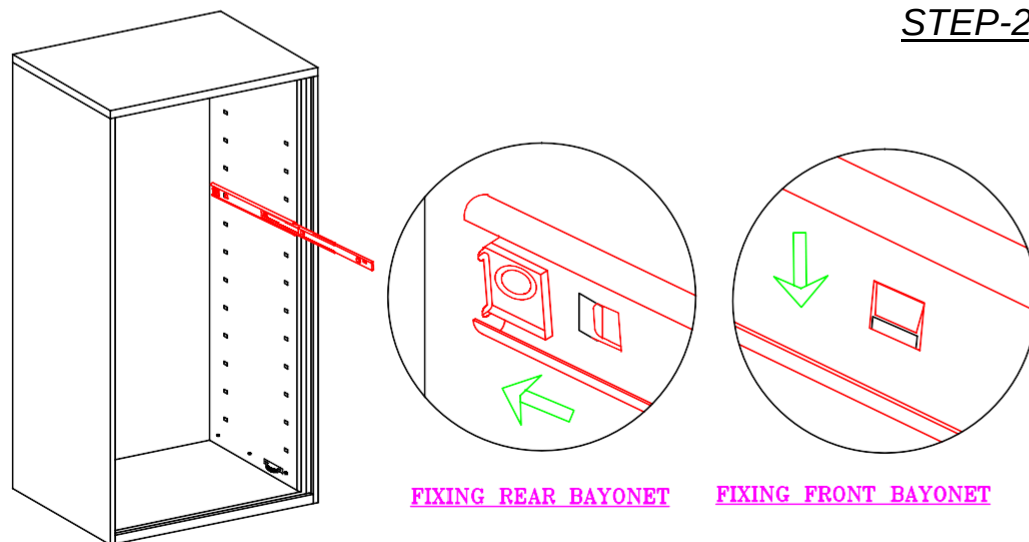

STEP-2

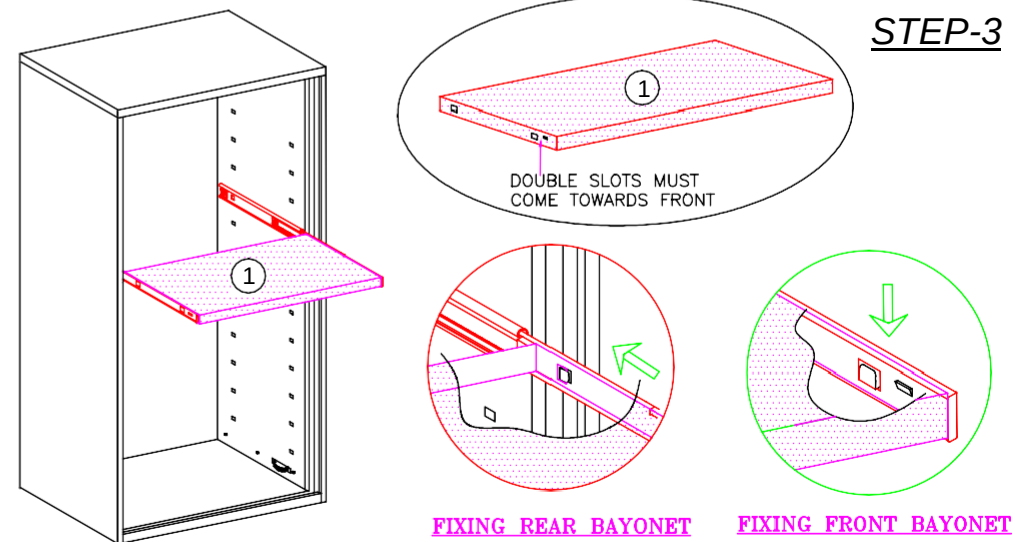

STEP-3

1. Position the AMPORS as shown on the bayonets of the slides in such a way that the double slots on the shelf come towards the assembler (front side).
2. Position the rear slot of the AMPORS on the rear bayonet of the RH slide and press the AMPORS inward as shown by arrow mark.
3. Now position the front slot of the AMPORS on the front bayonet as shown and press the AMPORS downward as shown by arrow.
4. Similarly fix the AMPORS on the LH Slide.