




BuyDirectOnline.com.au™

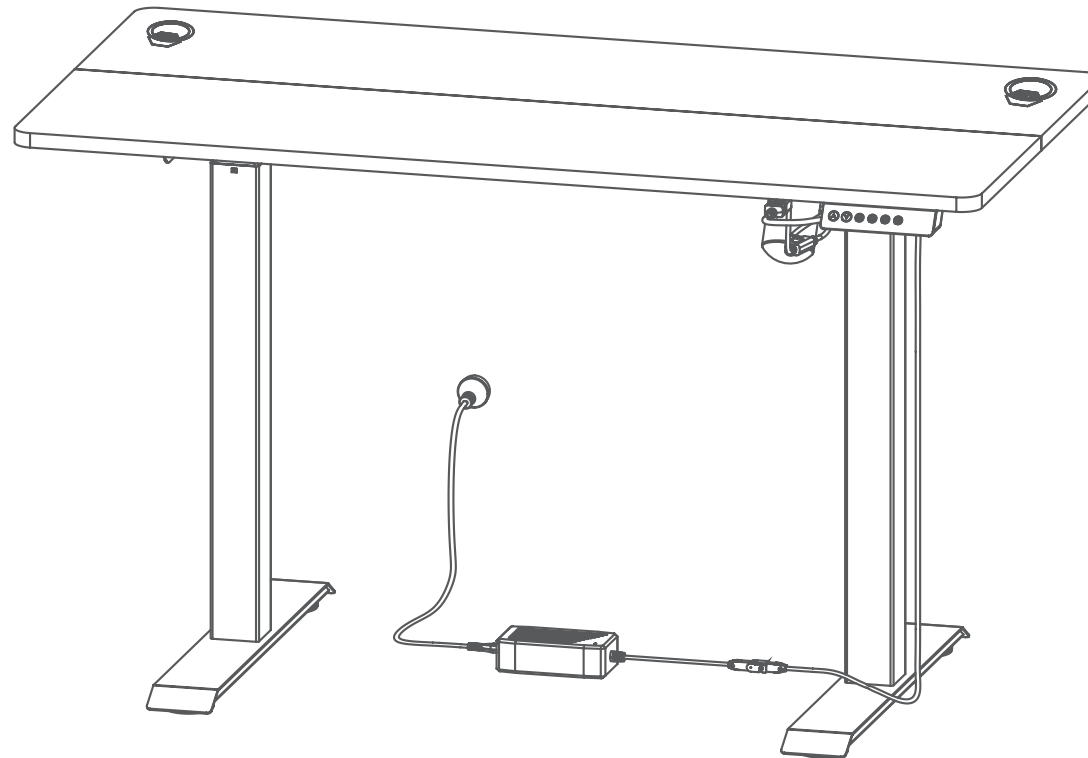


Quickstand Desk


Assembly Instructions

Quickstand Desk

Components List



A - Lifting Colum




B - Lifting Colum
with Gerabox




C - 2 x Foot



D - Crossbar

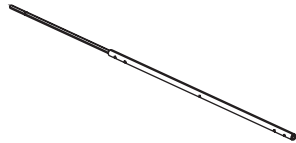


E - Sync Rod



F - 2 x Side Bracket




G - Power Cable




H - Handset




I - Power Adapter



J - Medium Wood Screw
(28 x for 48")
(32 x for 55")
(36 x for 63")




K - Medium Machine Screw
(8 x M8)



L - Small Machine Screw
(10 x M6)







M - 2 x Small Wood Screw




N - Connection Strap
(3 x for 48"/55")
(4 x for 63")

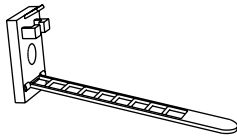

O - 10 x Cable Clip

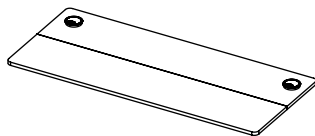


Q - 2 x Tabletop




R - Bolt
(5 x for 48")
(6 x for 55"/63")

Pro tip



Wood Screws: Pointy End



Machine Screws: Flat End

Tools Included



M5



M4




M2.5


Quickstand Desk

Assembly Instructions

STEP 1:



A - Lifting Column




B - Lifting Column with Gerabox




C - 2 x Foot





M5



L - Small Machine
Screw (10 x M6)

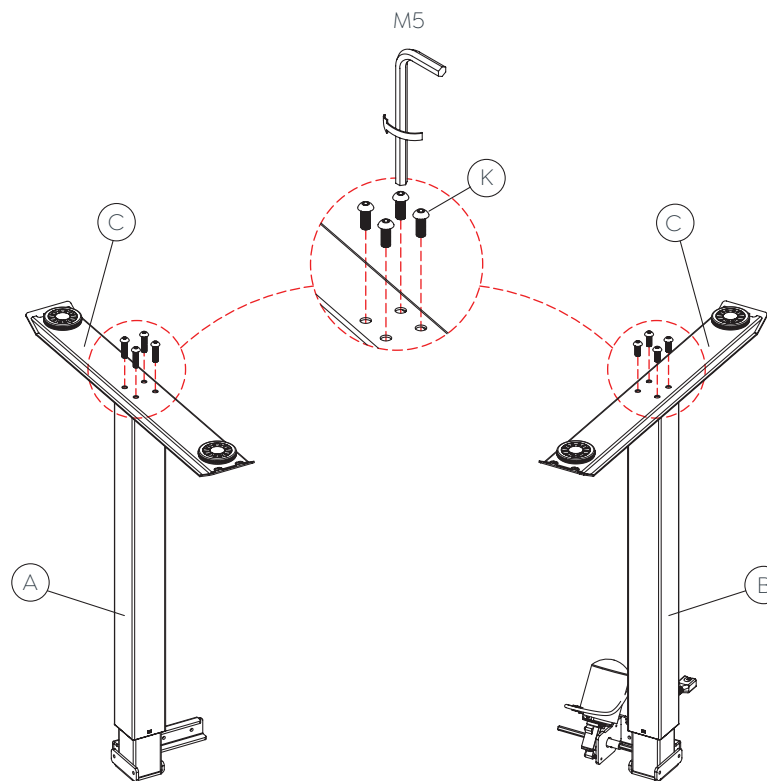



STEP 2:

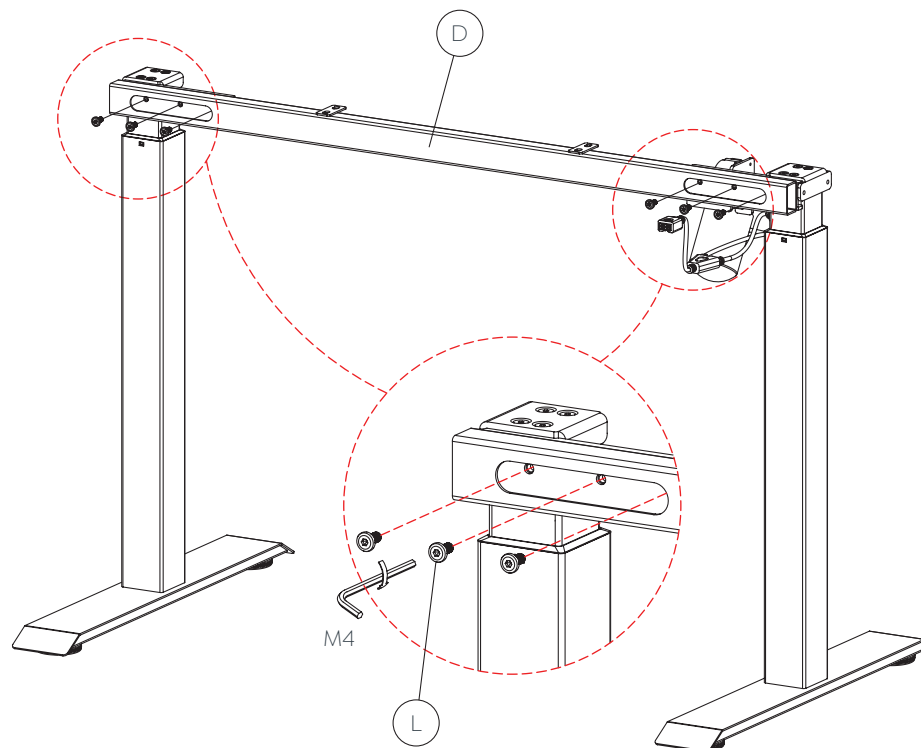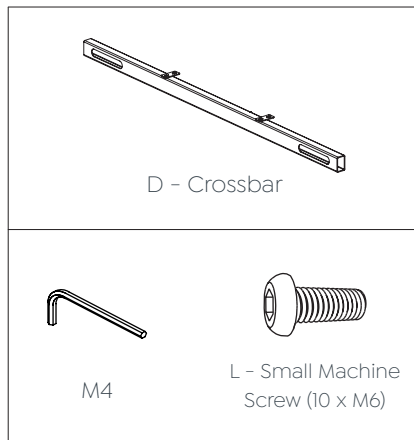


Quickstand Desk

Assembly Instructions


STEP 3:

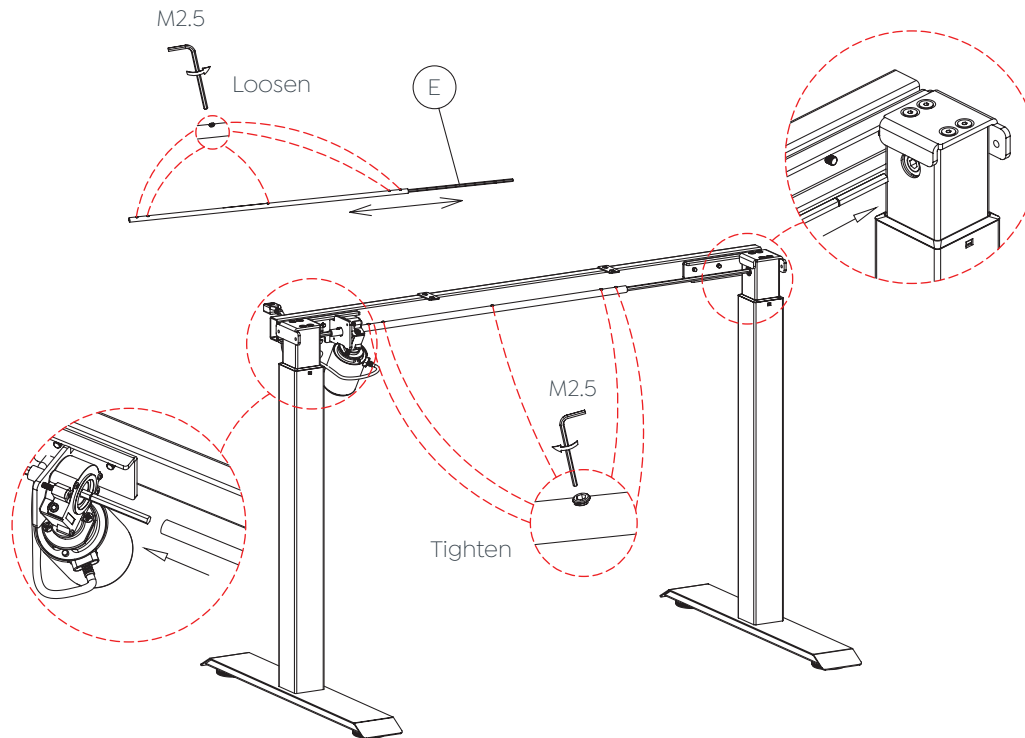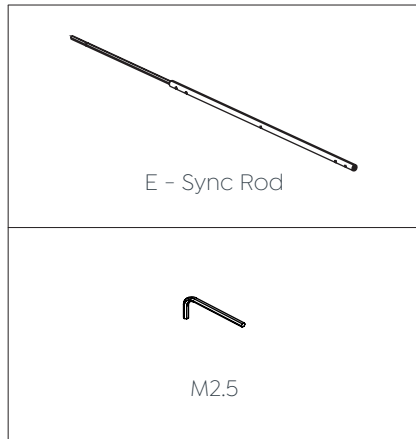


STEP 4:




F - 2 x Side Bracket



M4




L - Small Machine
Screw (10 x M6)

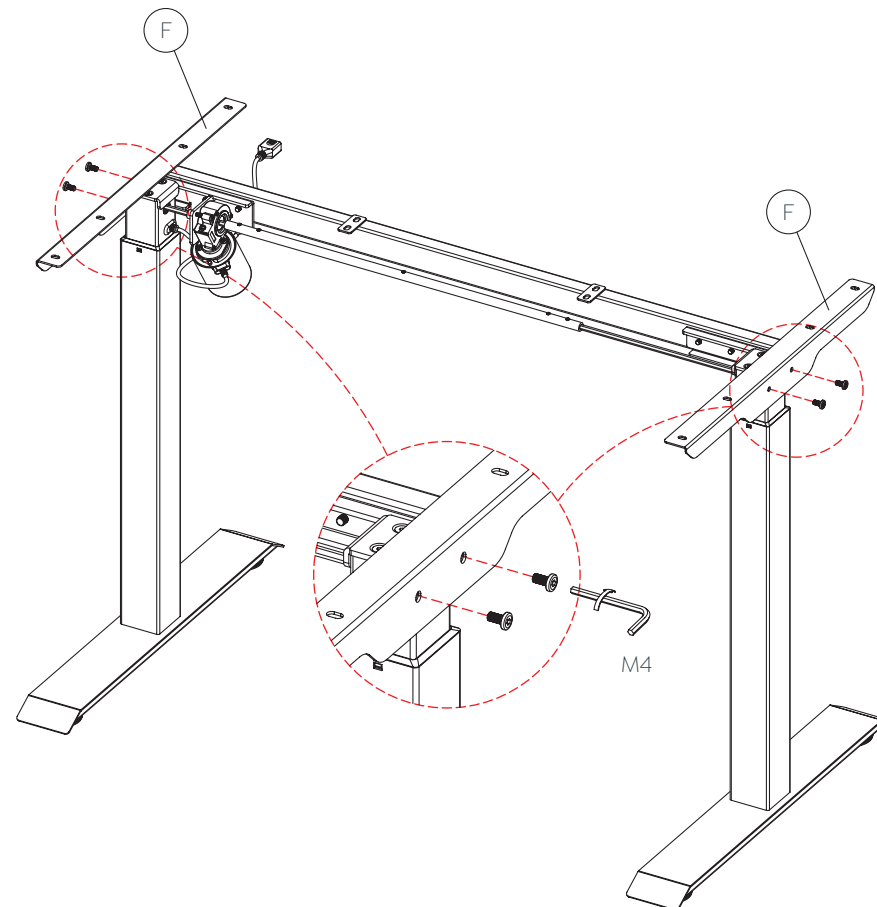


Quickstand Desk

Assembly Instructions


STEP 5:



R - Bolt
(5 x for 48")
(6 x for 55"/63")



N - Connection Strap
(3 x for 48"/55")
(4 x for 63")




J - Medium Wood Screw
(12 x for 48"/55")
(16 x for 63")




M2.5


1200mm Worktop

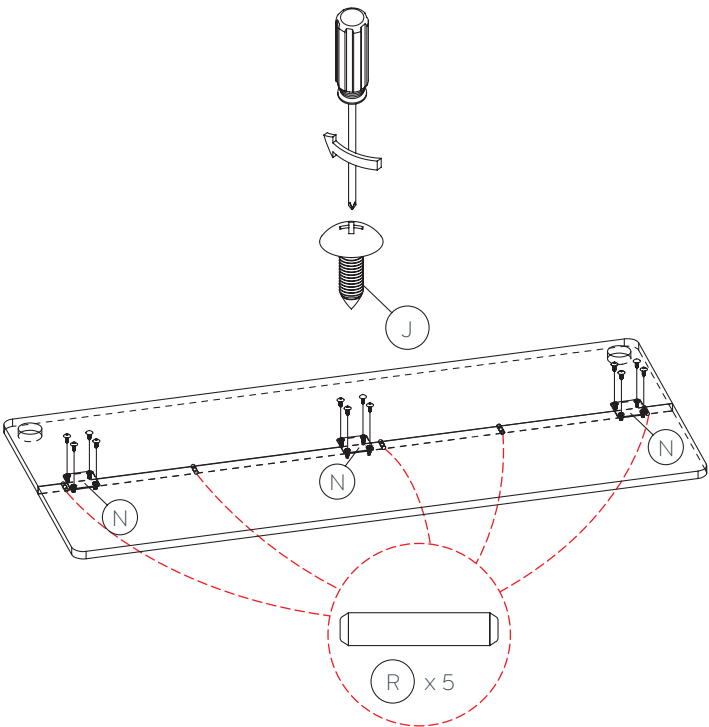

1400mm Worktop

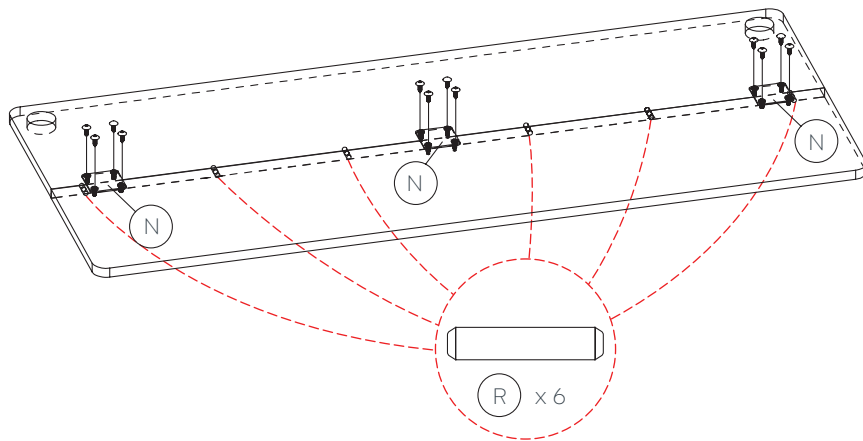


1600mm Worktop

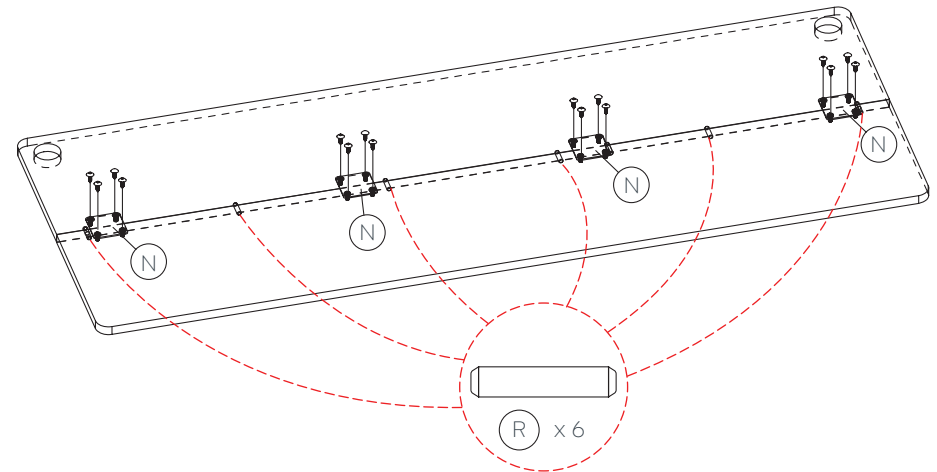


Quickstand Desk

Assembly Instructions


STEP 6:



J - 10 x Medium Wood Screw

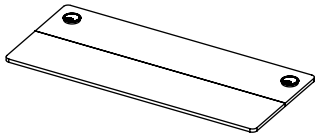


Q - 2 x Tabletop

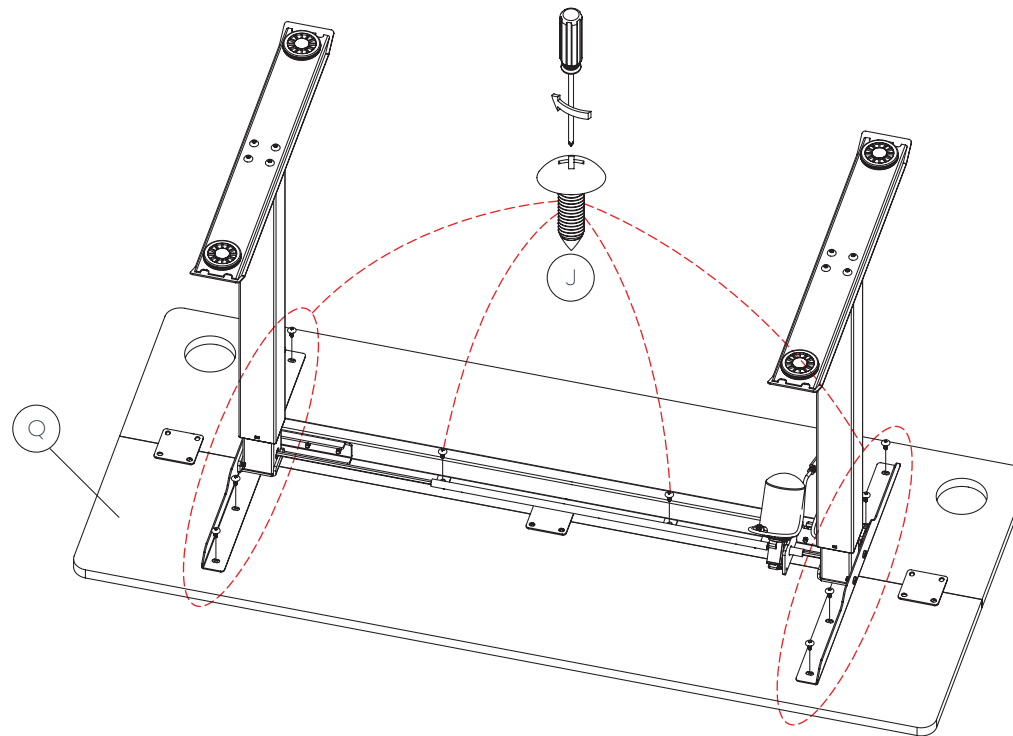


Note: Please make sure the Part E (sync) is facing you.


STEP 7:

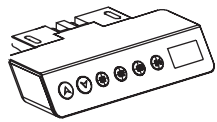

H - Handset



M - 2 x Small Wood Screw

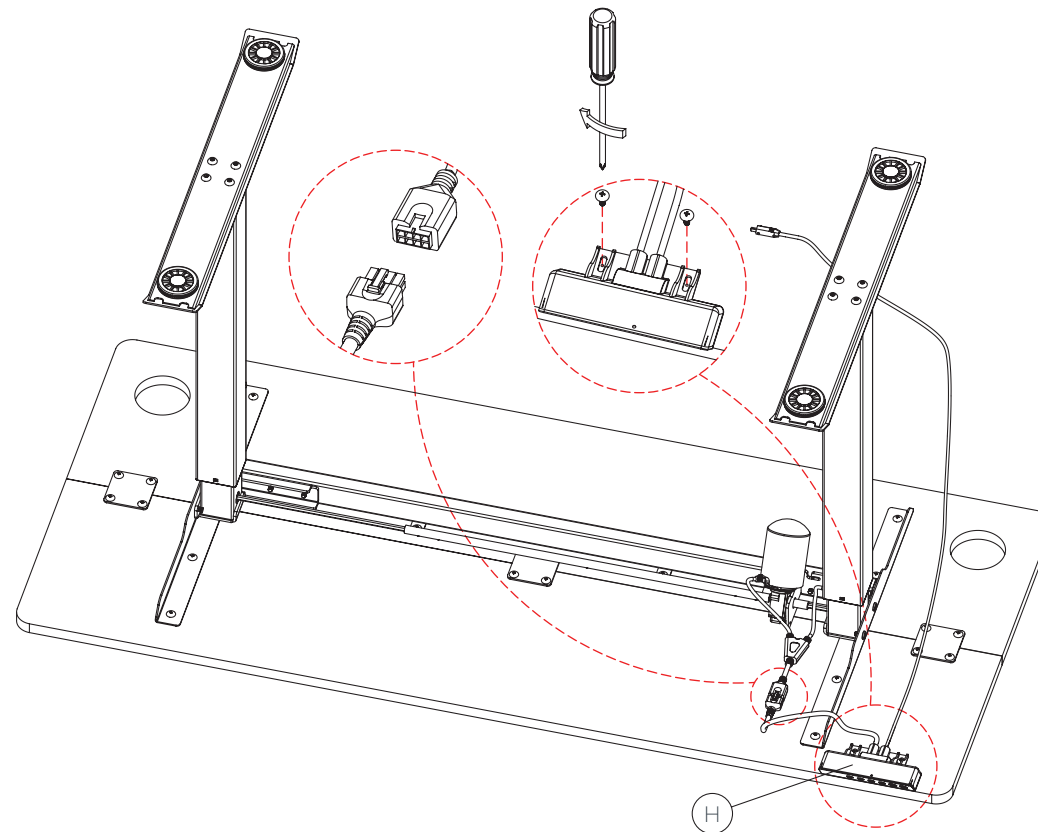

Quickstand Desk

Assembly Instructions


STEP 8:




G - Power Cable



I - Power Adapter



J - 2 x Medium Wood Screw

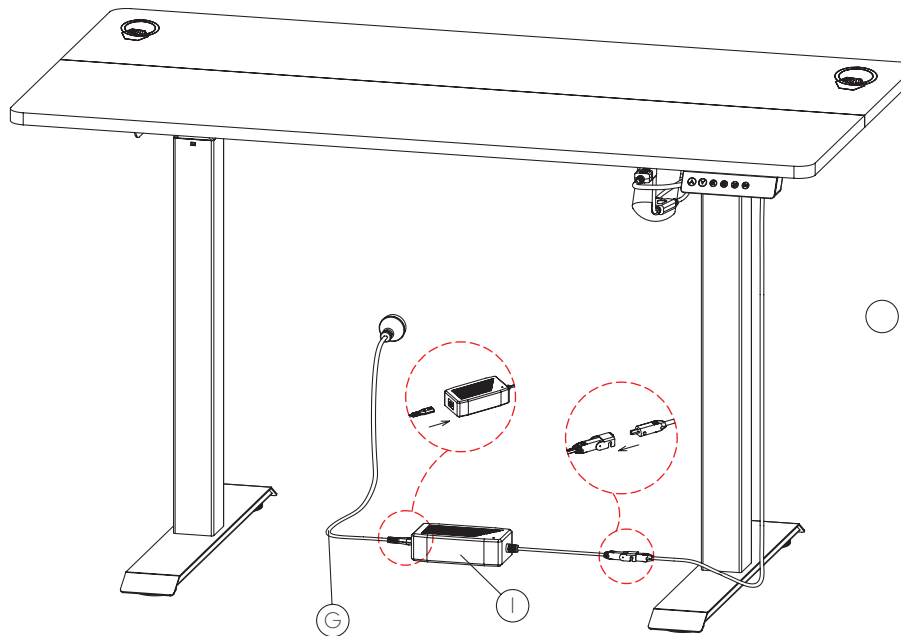



Location Sydney | Melbourne | Brisbane | Perth | Adelaide | Hobart

Call us 1300 313 495

projects@buydirectonline.com.au

buydirectonline.com.au