



Assembly Instructions


MODEL NO:SDWRML-380/2

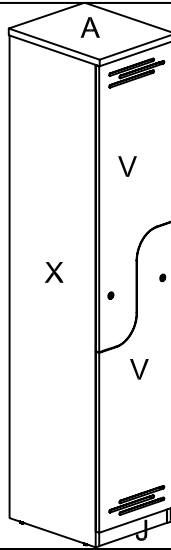


Pin 6x35 29PCS	Hinge (full-overlay) 4PCS	Lock 2PCS
Cam 29PCS	Wood Screw 4x16 24PCS	Lock Catcher 2PCS
Cam Cover 29PCS	ADJ. Feet ø18x5H 4PCS	Wood Screw 3.5x13 4PCS
		Wood Screw 4x20 8PCS

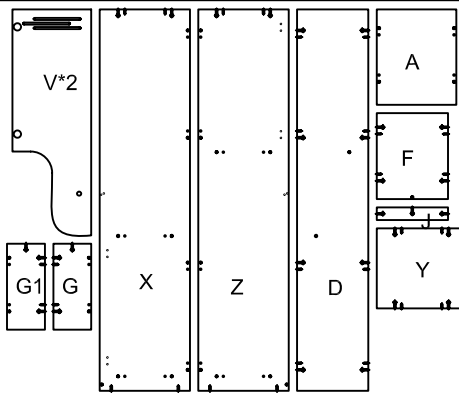


STEP1

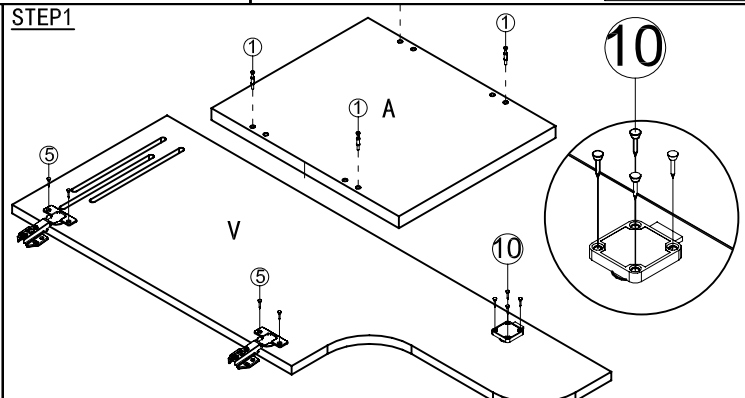


STEP2

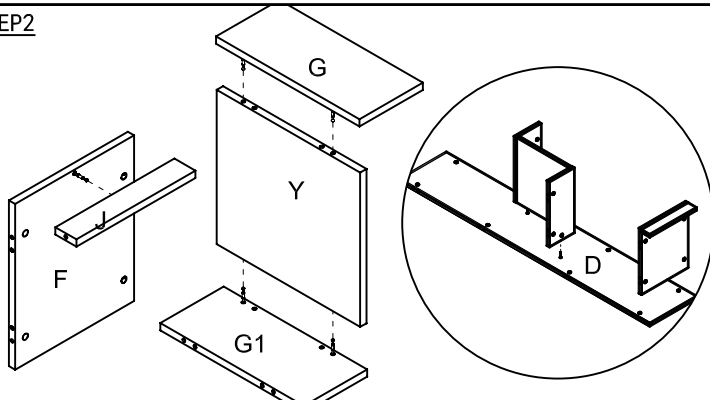


STEP3

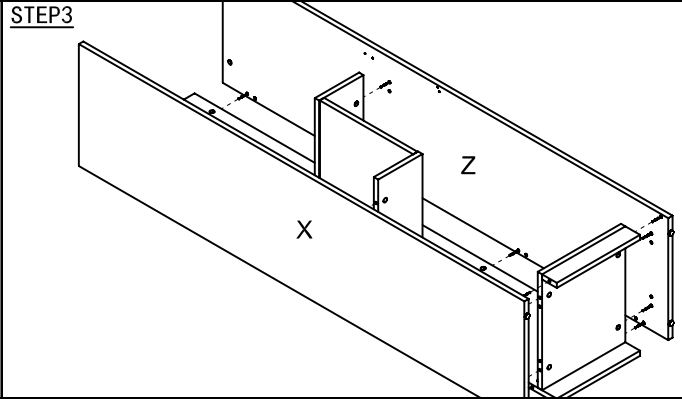

STEP4

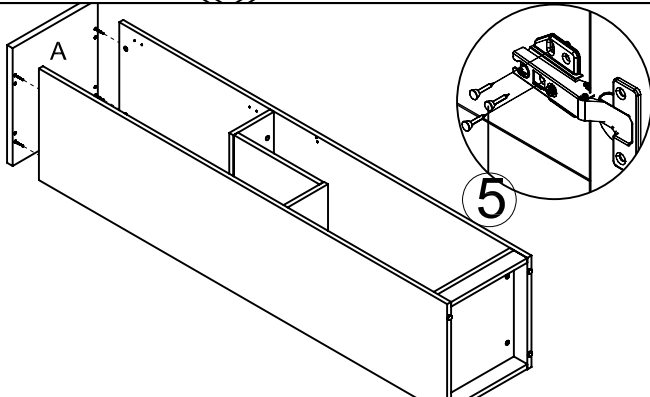

STEP5

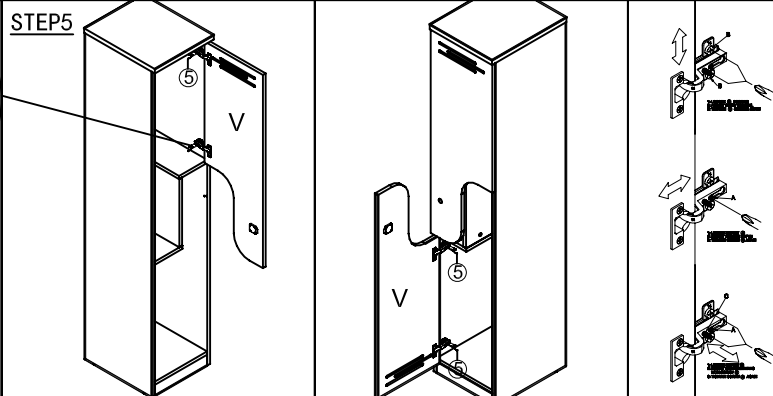

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

