



Assembly Instructions


MODEL NO:WRML-305/3

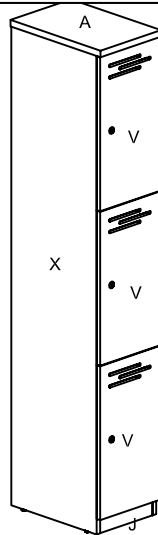


Pin 6x35 27PCS 1	ADJ. Feet ø18x51 4PCS 6
Cam 27PCS 2	Lock 3PCS 7
Cam Cover 27PCS 3	Lock Catcher 3PCS 8
Hinge (full-overlay) 6PCS 4	Wood Screw 3.5x13 6PCS 9
Wood Screw 4x16 36PCS 5	Wood Screw 4x20 12PCS 10

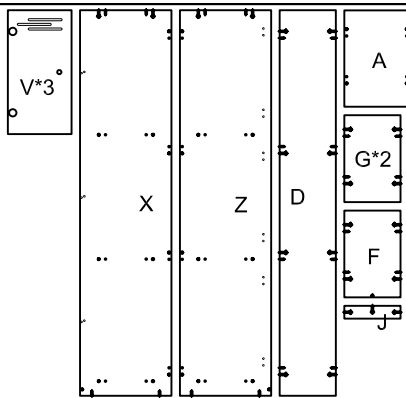


STEP1

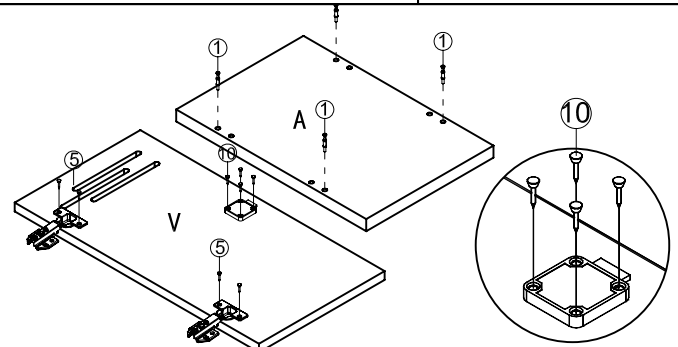


STEP2

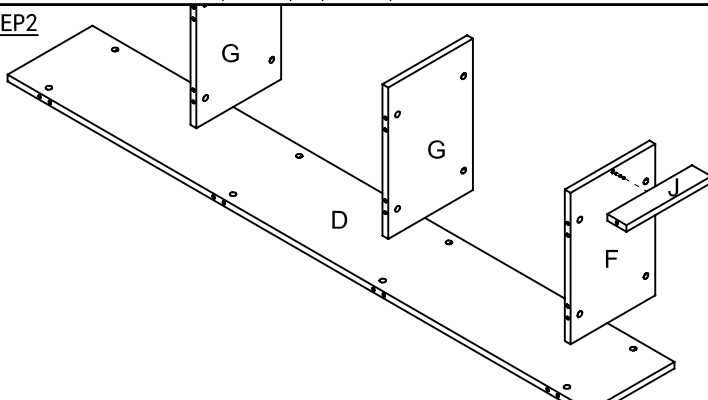


STEP3

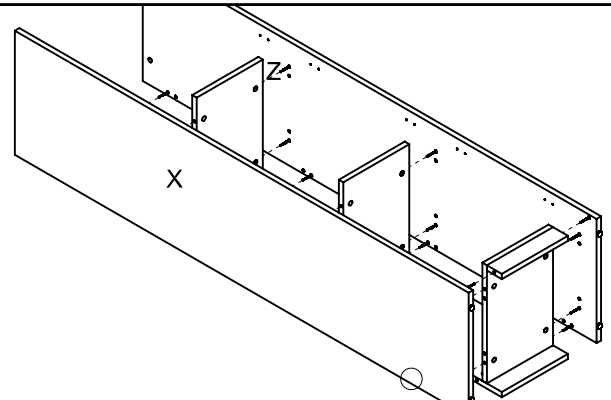

STEP4

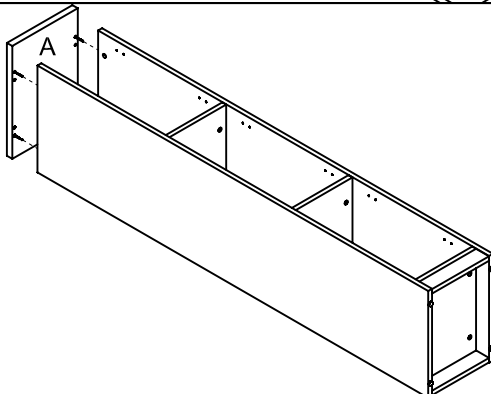

STEP5

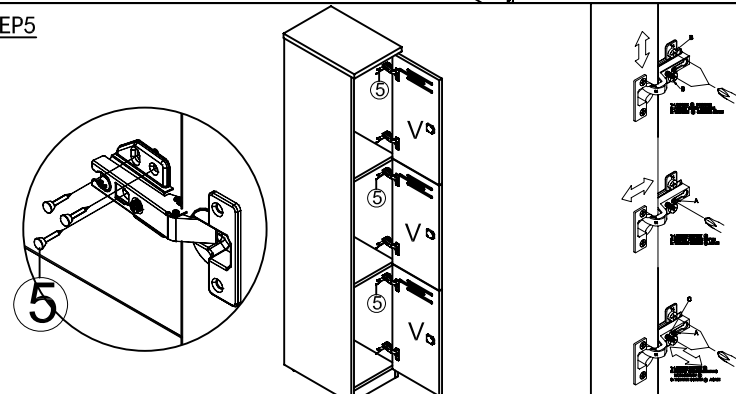

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

