




Assembly Instructions

MODEL NO.: OMJ-D1575


DESK SHELL

A  Cam Lock 10Pcs+1Pc(spare)	B  Klix Cam 10Pcs+1Pc(spare)	C  Cam 10Pcs+1Pc(spare)	D  Dowel 8Pcs+1Pc(spare)	E  Grommet 2Pcs	F  Adjustable Glide 4 Pcs
---	---	--	---	--	--


STEP1

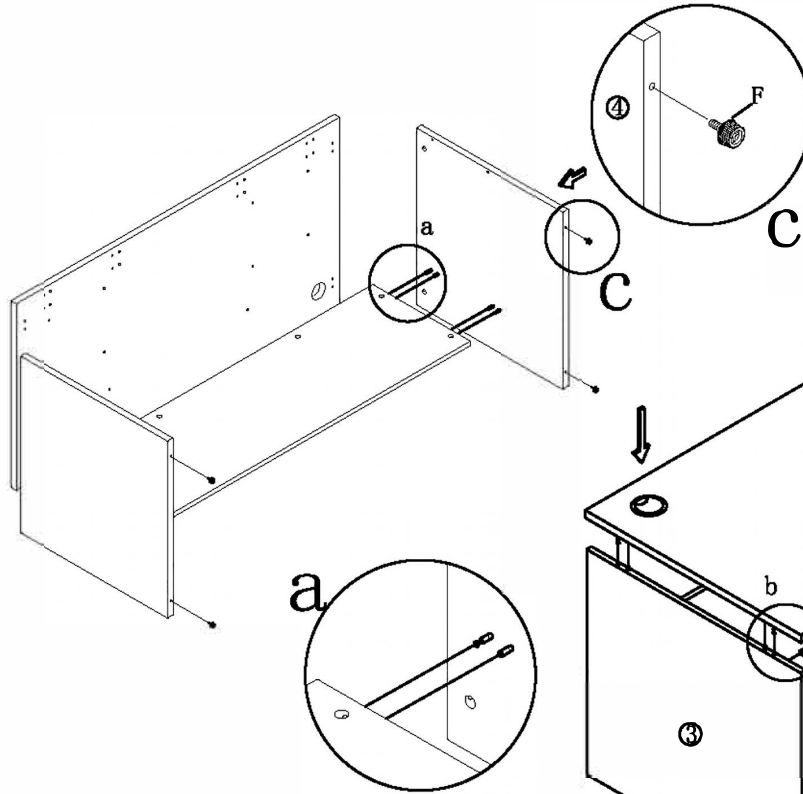

STEP2

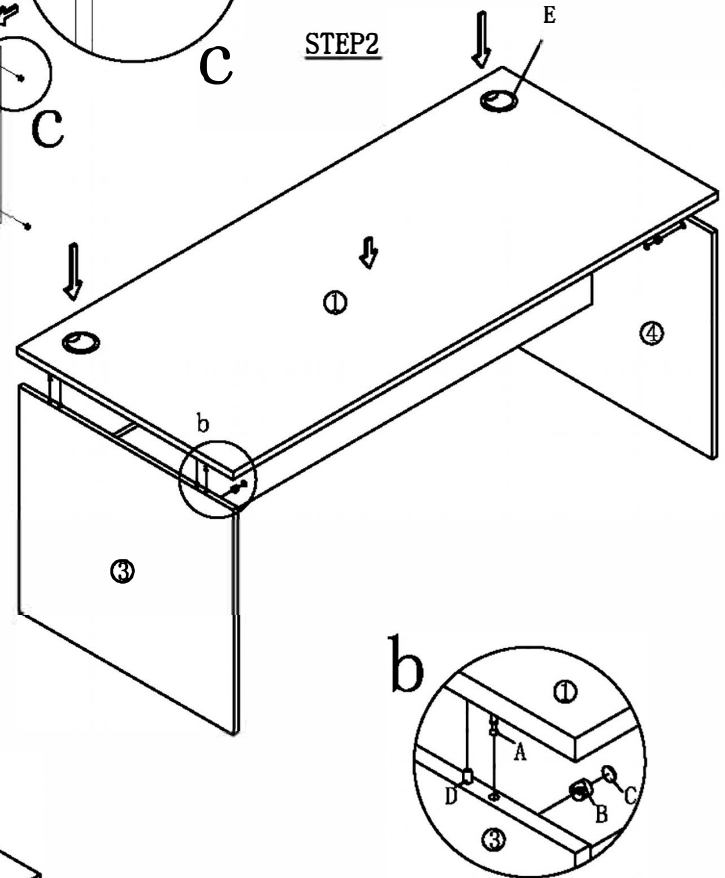

STEP3

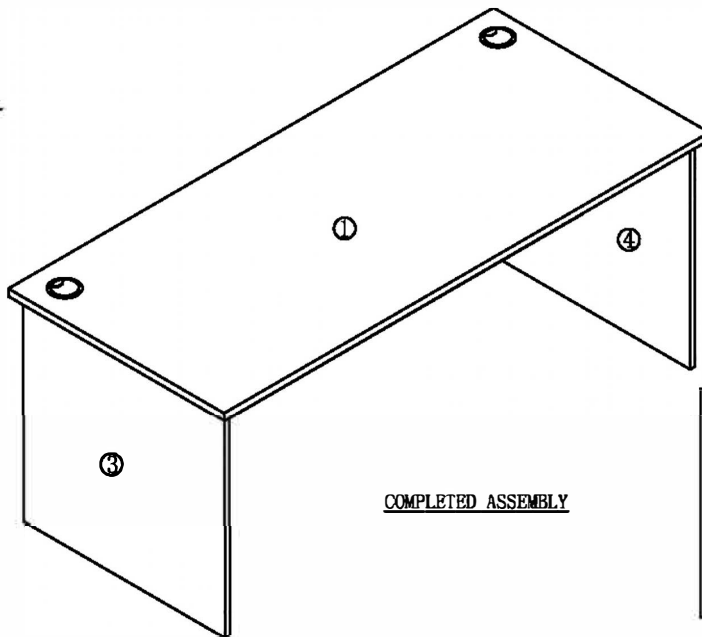


COMPLETED ASSEMBLY

IMPORTANT:
FUNCTION OF KLIX CAM



1/4 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW IS
POING UPWARDS BEFORE
INSERTING INTO THE PANELS
HOLE

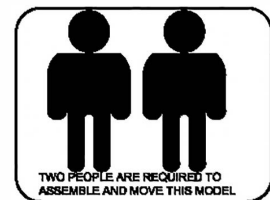

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.