




TRESTLE FRAME




BDO Furniture Group
"MAKING FURNITURE EASY"

Albury Side, Albury Arm, Chevron & Coogee Metal Chairs

PARTS:

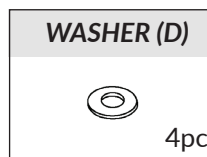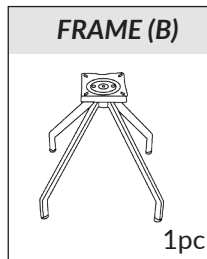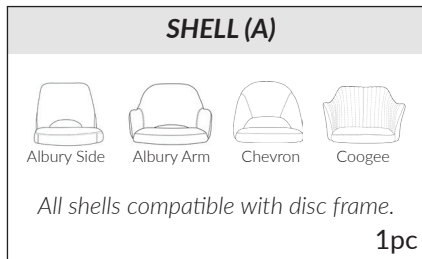

TOOLS (NOT INCLUDED):

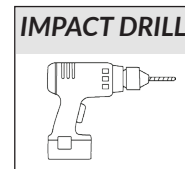

We strongly recommend applying thread lock to the full length of all screws and using an impact drill.

WARNING:

Always take care with an impact drill gun, especially when screwing into the frame.

INSTRUCTIONS:

