





PARTS:

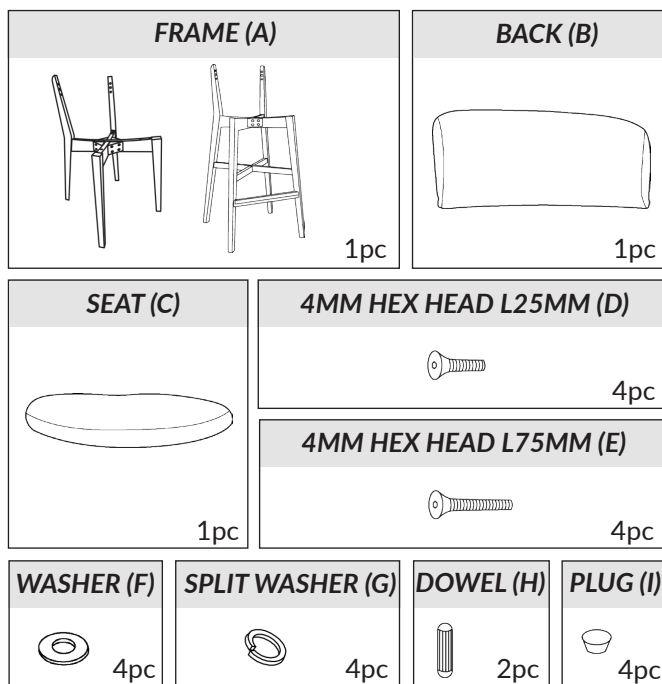

TOOLS (NOT INCLUDED):

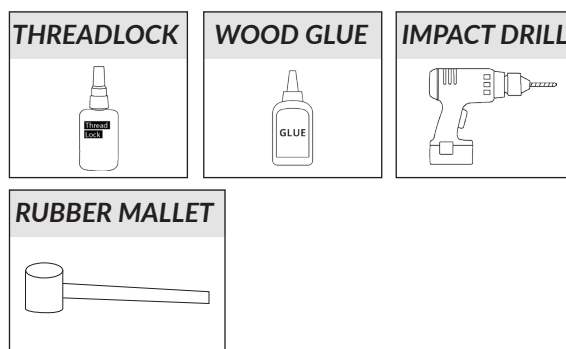

We strongly recommend applying thread lock to the full length of all screws, using Wood glue for the plugs and using an impact drill. Scan the QR code with a phone or tablet to access the assembly video.

WARNING:

Always take care with an impact drill gun, especially when screwing into the pads. You will need to use the appropriate screw combinations for the different seat and back types.

INSTRUCTIONS (UPHOLSTERED SEAT & BACK):

