
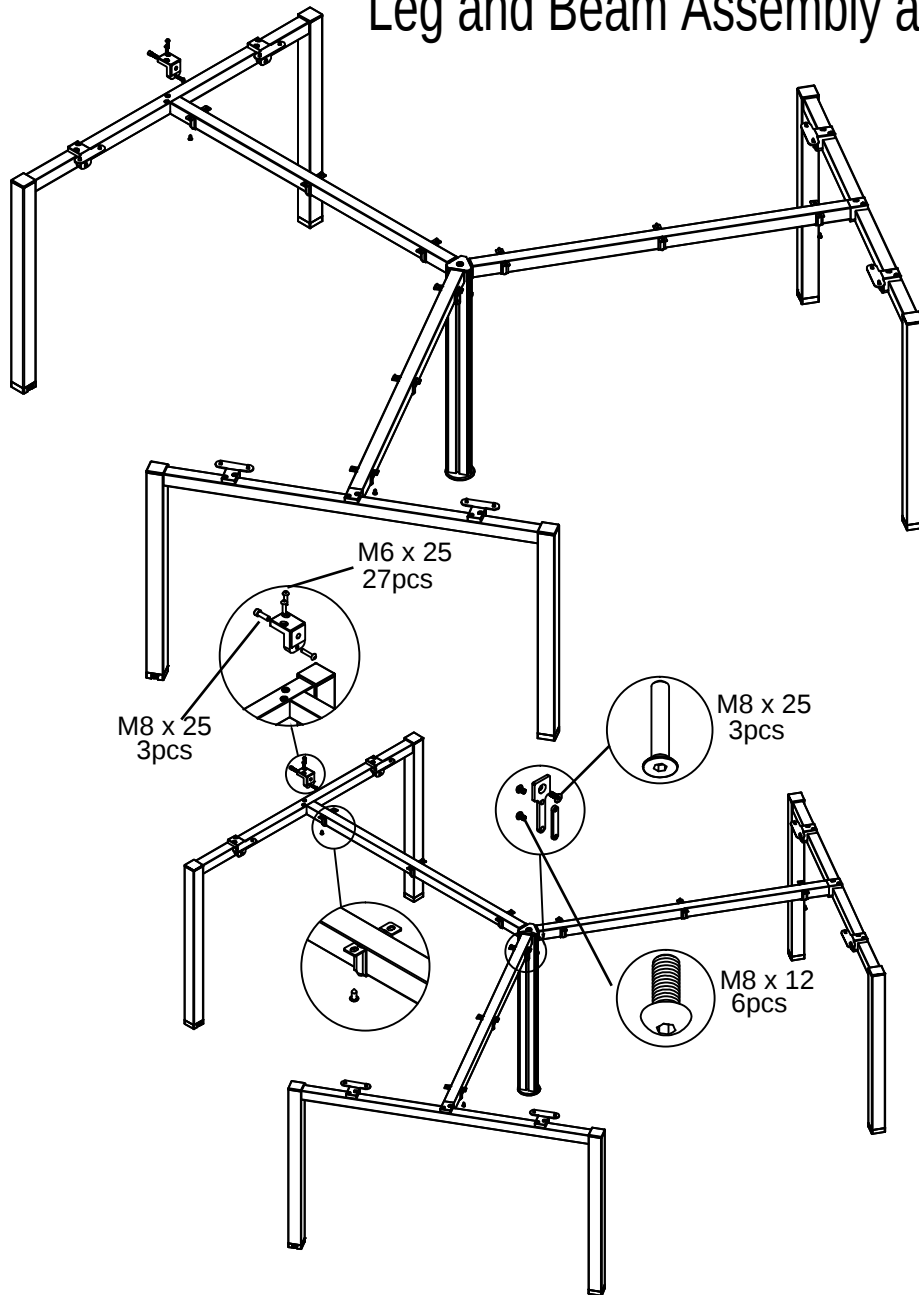


Cubit 3 Way Workstation

Leg and Beam Assembly and Timber Top Attachment Instructions



	M6 x 25 27pcs		M5 x 20 30pcs		M8 x 12 6pcs
	M8 x 25 3pcs		M8 x 25 3pcs		

*** For Timber Top Fitment, First Centre Top And Ensure That The Correct Length Screw Is Used ***

