



## Touchless Hand Sanitiser Stand

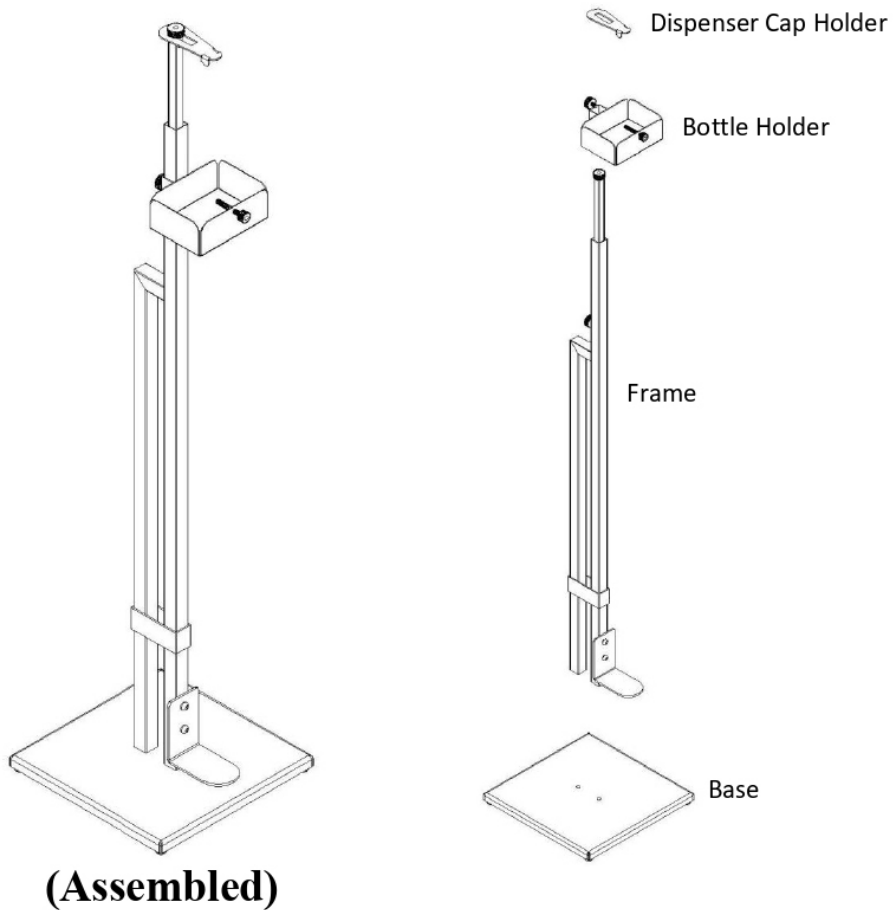


## ASSEMBLY INSTRUCTIONS

### STEP 1

Align the holes of the **Base** with the **Frame** as shown in the image below.

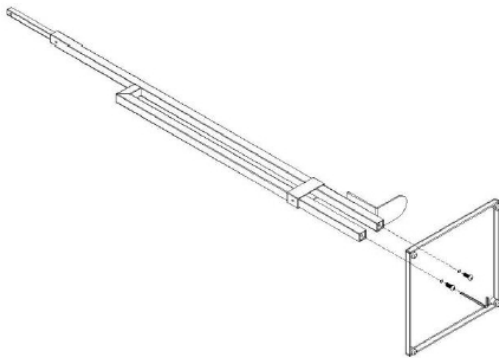


Insert and tighten the screws with the help of the Allen Key provided.

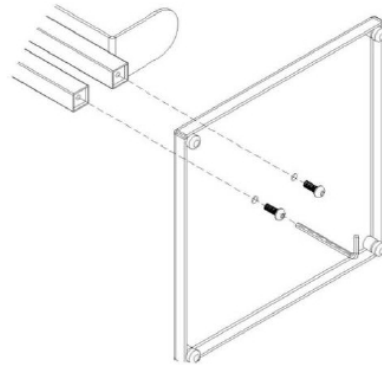


### STEP 2

Unscrew the bolt from the top.  
Refer to the image below.

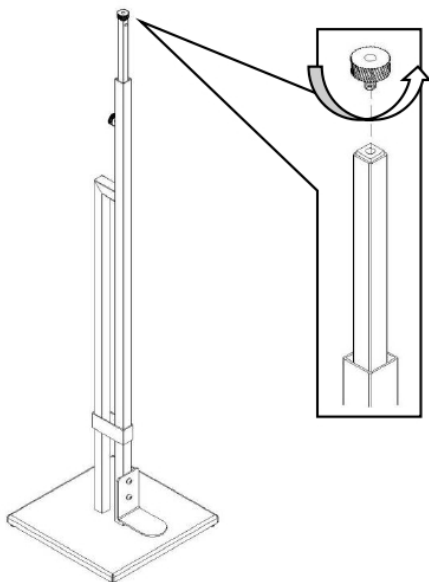


Slide the **Bottle Holder** onto the **Frame** to the desired height as shown below.

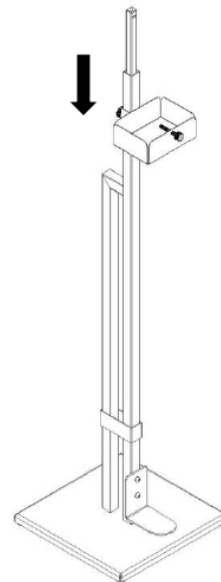


## STEP 3



Align the **Dispenser Cap Holder** to the **Frame** as shown below.

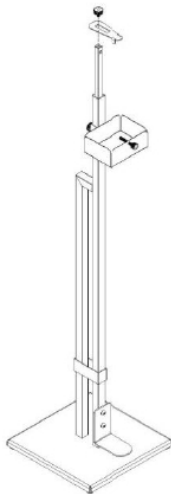

Insert and tighten the top bolt with your hand into place, securing the **Dispenser Cap Holder**.


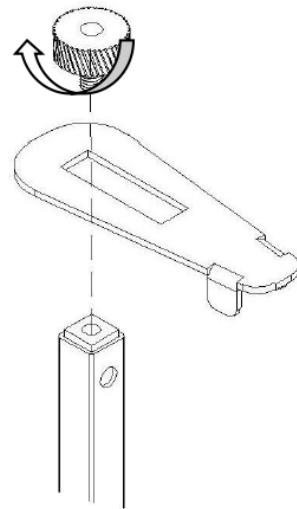


Assembly is now complete!

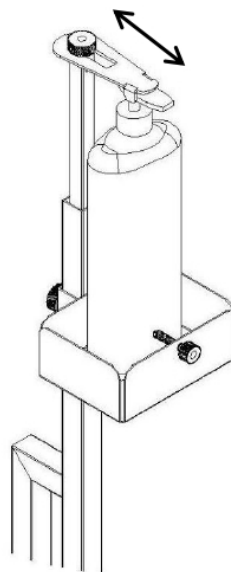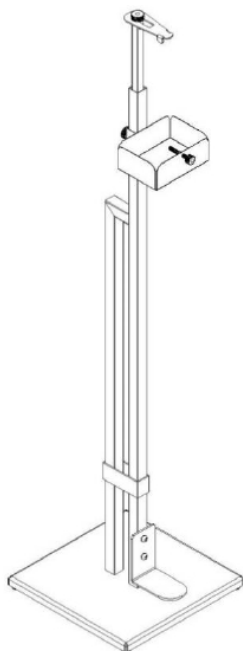

You can adjust the **Dispenser Cap Holder** as per the cap of the sanitiser bottle.

With this stand, you can place the **Bottle Holder** in 4 different directions as shown below. Simply unscrew the top bolt and remove the **Dispenser Cap Holder**. Slide out the **Bottle Holder** and insert in whichever direction you prefer. Once done, screw the top bolt and the **Dispenser Cap Holder** back in place.

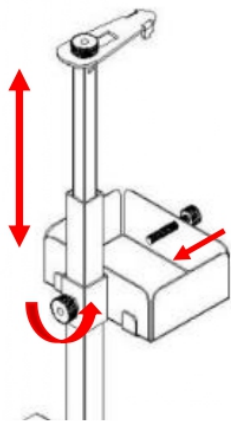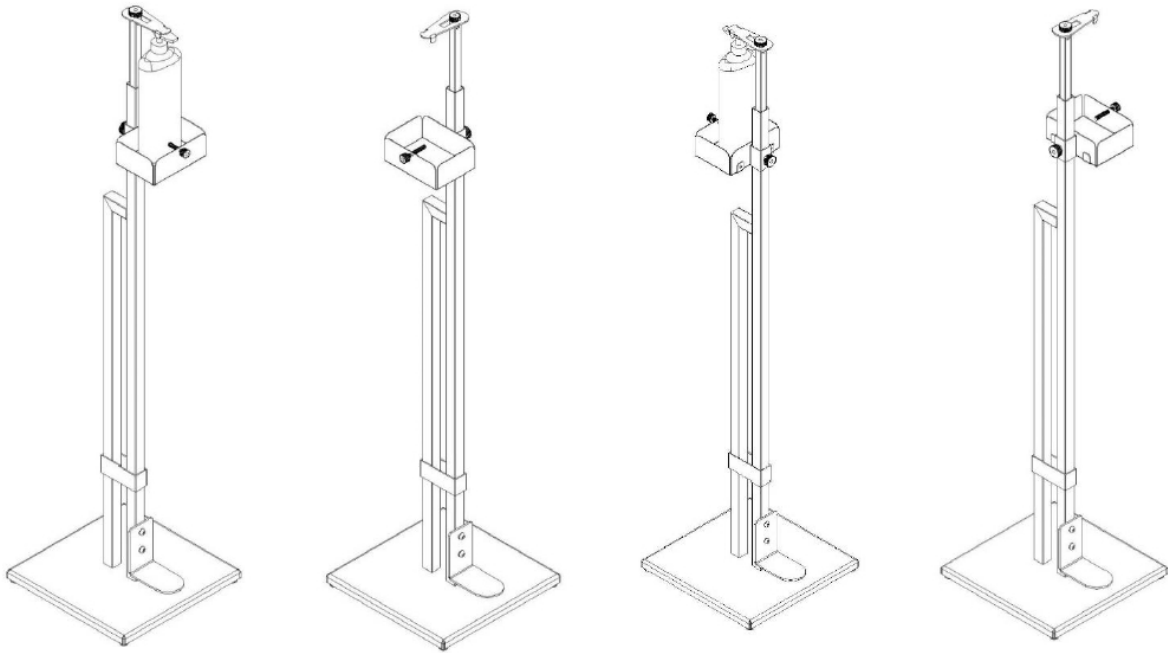

To adjust the height of the **Bottle Holder**, loosen the bolt on the **Frame** and simultaneously slide the Bottle Holder to the desired height. Then, secure the **Bottle Holder** by tightening the bolt.

Note, the bolt on the **Bottle Holder** can be used to secure large sanitiser bottles in place.

**Note:**

1. Sanitiser Liquid and Bottle are not included.
2. **Base** is provided with levelers, so you can adjust according to your floor, if required.