

Battery

You must read these safety instructions and warnings before using or charging your batteries.

Lithium-ion batteries might cause damage - like leaking, fire, or explosion when misused or defective. Failure to read and follow these instructions may result in fire, personal injury, and damage to property if charged or used improperly, or if defective.

If your charger or battery becomes hot, balloons/swells, emits smoke or smells unusual, STOP CHARGING IMMEDIATELY.

Observe the battery for 15 minutes in a safe area outside of any building or vehicle and away from any combustible material to assure that it does not ignite. Do NOT disassemble or modify the battery. Vibration, puncture, contact with metals, or tampering with the battery can cause it to fail.

The battery contains safety and protection devices, which, if damaged, may cause the battery to generate heat, explode, ignite, or short circuit. Severe injury may occur. Store in a cool, dry place. Never store or charge batteries under extreme temperatures, such as in a hot car, near heat sources or fire, or in pressurized or very cold environments.

Warranty

All parts and materials are warranted for 3 years. During this time, X-Chair™ will provide replacement parts for any damage that is due to defects in material or workmanship. For the first 2 years, X-Chair™ will bear the entire cost of replacement parts and shipping. For the 3rd year, X-Chair™ will bear the cost of the replacement parts, but the customer will be liable for the cost of shipping.

The customer must provide appropriate pictures of their damaged product if requested. A defect in material or workmanship does not include damage to a product, or failure of a product to operate or perform properly or to maintain the appearance, caused by (1) misuse or abuse of the product; (2) improper assembly or assembly that was not as recommended by the written assembly instructions;

(3) normal wear and tear; (4) a natural disaster or an Act of God; (5) transportation; (6) an unauthorized modification made without the express written consent of X-Chair™; (7) improper storage; (8) the natural aging of materials such as wood, leather, and fabric which results in colors shifting during use; (9) crocking or reverse crocking of dyes from clothing on our seating materials.

Products damaged in these ways will not be considered defective and will therefore not be repaired, replaced, or refunded. X-Chair shall not have tort liability with respect to a product, and shall not be liable for any consequential, economic, indirect, special, punitive, or incidental damages arising from a product defect.

Returns

X-Chair.com purchases come with the reassurance of a 30-day money-back guarantee unless otherwise noted at the time of purchase. If you are not satisfied, you may return the item within 30 days of delivery for a full refund of the purchase price less \$19 to cover a return kit.

Due to the unique functionality of the DVL (Dynamic Variable Lumbar), we request that you keep and use your X-HMT® for at least 10 days to allow your body to properly adjust. If you still wish to request a return after 10 days, please call X-Chair Customer Service.

One of our Customer Care representatives will walk you through all the features and adjustments to ensure you are experiencing all that X-HMT® has to offer. In the event that a return is required, X-Chair will ship you a special return kit and return shipping label to pack up your chair and return it back to us.

All purchases are eligible for an exchange within that same 30-day time frame, a \$19 return shipment still applies. The item must be returned in like-new condition, with all paperwork, parts, and accessories to ensure full credit minus the return charge.

X-HMT® Massage Chair

X-Chair's X-HMT® Massage Chair provides direct health benefits to its users by increasing blood flow, speeding muscle recovery, and reducing stress and anxiety. The X-HMT® Heat & Massage chair heightens productivity and boosts energy, through heat and massage targeted at the body's core, all while utilizing 10 ergonomic fit features.

This dynamic massage chair exerts a constant or variable massage cycle with 2 levels of massage intensity (gentle or powerful) for a total of 4 massage program combinations. Coupled with heating capabilities, the innovative technology of the X-HMT® creates a massage chair that can be used for everything from watching TV, to working on a proposal, to simply enjoying a therapeutic massage.

Benefits

- Increases Blood Flow
- Speeds Muscle Recovery
- Relaxes stiff muscles, thereby reducing Stress And Anxiety
- Heightens Productivity
- Boost energy

X-Chair

X-Chair is a work chair company that's made for the needs of 21st-century workers. X-Chair advances the function of work seating. It is distinctly stylish, budget-friendly, and made with proprietary ergonomic comfort technology that has never before been applied to work seating. It molds to the shape of the user's body.

10 ergonomic adjustments make this glove-like fit possible with adjustable height and depth; a height-adjustable backrest; a headrest with adjustable height and angle; 4-dimensional armrests with adjustable height, width, depth, and angle; adjustable tilt tension; and a tilt lock. X-Chair's greatest ergonomic feat is one that needs no adjusting. The proprietary Dynamic Variable Lumbar (DVL) Support adjusts itself to the user's shape to provide perfect lumbar support from the moment they hit the seat.

The health benefits of X-Chair's technology are numerous. Now, featuring X-HMT® heat and massage therapy, you're entering a world of renowned comfort, relaxation, and productivity.

Flexible and Versatile
Use the X-HMT® Massage Chair while on Battery Power or Charging



1 Battery Power

The X-HMT® Massage Chair is designed to enhance your day. Whether you're on the move, sitting at your desk or watching a movie you can use the X-HMT® on the go when charged.



2 Charge from your laptop or computer

The X-HMT® comes with a USB charging cord making this the most versatile massage chair out there. Easily charge your X-HMT® massage chair through your computer or device and let it work for you during your day.



3 Wall Charger

Use the included wall charger when you're in work mode and let the X-HMT®'s heat and massage therapy keep you focused and less stressed.



Included in the Box



Installation



- 1 Hold the X-HMT® with the button panel on the right side facing you.
- 2 Place the X-HMT® into the Dynamic Variable Lumbar (DVL) support of your chair.
- 3 Hold the X-HMT® back cover with the embedded logo on the left, facing you.
- 4 Place the cover behind the back support bar.
- 5 Align the left edge of the cover with the left edge of the DVL. Adjust the back cover so all clips are tucked within the DVL frame and the X-HMT® is covered except for the button panel

Uninstall



- 1 Gently push in the right side of the X-HMT® front cover and then pull towards you to release the clips from the chair.
- 2 Once all of the clips have been released, remove the cover out from the right side.
- 3 Make sure to unplug the X-HMT® unit before removing it from your chair.
- 4 Hold the X-HMT® unit and pull it out towards you and to the right.

Using Your X-HMT®

- 1 Your X-HMT® should be 75% charged when you first go to use it. For best battery life results, please run your X-HMT® unit until it is depleted (unit will blink red and no longer run) before charging it back to full for the first time.

- 2 To fully charge your X-HMT® fully you must plug it in for four or five hours.

- 3 Your X-HMT® can be used while plugged in, or on battery power only. If you are only using battery power you can expect the following number of 15-minute cycles before you have to charge it again:

Using Massage function only



Twenty
15-minute
cycles

or



5 Hours

Using Heat and
Massage function
together



Seven
15-minute
cycles

or



1 Hour
45-minutes

Using Heat
function only



Seven
15-minute
cycles

or




1 Hour
45-minutes

- 4 Your X-HMT® will always run for a 15-minute cycle and then shut off automatically for safety.

Massage Settings


- 1 There are two levels of massage intensity for your X-HMT®. Press the power button once for Gentle Massage. You will see two green lights to denote gentle massage. Press the intensity button one time for more Powerful Massage. You will see a blue light next to the intensity button to denote a powerful message (the power button light will still be green).

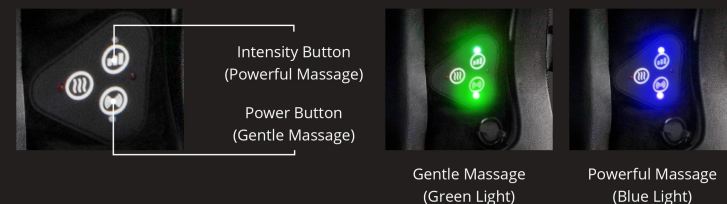

Gentle Massage
(Green Light)

Powerful Massage
(Blue Light)

- 2 There are two different massage modes for your X-HMT® – Constant and Variable. The Constant Mode is activated when you first press the power button. To activate the Variable Massage Mode press the power button a 2nd time. The light next to the power button will turn blue to indicate the variable mode is activated. Press the power button a 3rd time to turn off massage. Note: the power button only controls massage, not heat.

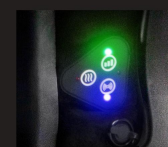

1st

Constant
Massage

2nd

Variable
Massage

3rd

Turn off
X-HMT®

- 3 There is one heat setting for your X-HMT®. Press the Heat button once to turn the heat on. A red light will come on. Press it again to turn the heat off.



Heat Button
55 °C / 131 °F