

A3 Backrest Height Adjustment




Hold the two sides of the backrest handle, one could adjust the backrest up or down. The backrest would be returned back to the lowest when pushed to the top. There is 1.57" adjustable.

A4 Lumbar Support Height Adjustment



A. The height of lumbar support can also be adjusted by adjusting the backrest height.
B. Suitable height of the lumbar support would bring more comfort for one's waist.

B1 Armrest Height Adjustment



Raise the armrest directly to adjust the height. The adjusted height is 85mm. The armrest will fall automatically when it is in the highest point.

B2 Arm Pad Angle Adjustment



Arm Pad Angle Adjustment: A range of 15° can be achieved by swiveling the arm pads inwards, or swiveling the arm pads outwards to achieve another 15°.



The best angle could be reached when the arms can rest naturally on the arm pads while working.

B3 Arm Pad Forward and Backward Adjustment



Forward and Backward Adjustment: Push the arm pads forward or backward to a desired position. The range for it is about 2".

C1 Seat Height Adjustment



Pull up the single rod control lever and hold it while raising or lowering the seat to change the seat height. When the lever is released, the seat height is locked.



Since an incorrect seat height contributes to back's fatigue, it is recommended that the angle of knees is slightly less than 90° and feet are level with the floor.

C2 Seat Depth Adjustment



Push the single rod control lever forward to adjust the seat depth (The approximate range is 1.97"). Return the lever to the original middle position, the position will be fixed.



Ideal depth is achieved when the upper legs are on the seat, the lumbar area is in touch with the backrest of the chair, and the back of knees do not touch the edge of seat cushion.






Parts List


① CASTER × 5	④ ARMREST × 2
② BASE × 1	⑤ SEAT CUSHION × 1
③ GAS LIFT × 1	⑥ BACK CUSHION × 1
Bolts & Washers ⑦ 1/4" × 5/8" FOR ARMREST ⑧ 1/4" × 1" FOR ARMREST ⑨ M8 × 17mm FOR BACKREST	
ALLEN WRENCH	

Product Assembly Instruction


STEP 1




STEP 2




STEP 3




STEP 4




Function Controls




Function Adjustments



A1 Headrest Height Adjustment




Hold the handle of headrest to adjust the height of it, there are 6 position with 40mm adjustable




The most suitable height could be achieved when one's scruff is fully supported by the headrest.

A2 Headrest Angle Adjustment




Hold the headrest cushion to adjust the angle of it, there is 30° adjustable.




The best angle could be reached when one could move the neck naturally.

A1 Backrest Tilt Angle Adjustment




Pull the single rod control lever completely backward and lean against back until a desired angle is achieved, and then return the lever to the original middle position to lock at an ideal angle. There are 4 positions with 25° range.




The proper backrest angle can reduce the pressure on the spine.

A2 Backrest Tension Adjustment



Swivelling clockwise or anti-clockwise the Backrest Flexible Tilt Tension Adjust Button, one can enhance or reduce the tilt tension

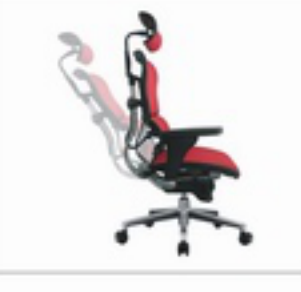

The synchro mechanism is ergonomically designed to enhance comfort and reduce strain. The back-to-seat adjustment/tilt is 3:1 ratio.